SONY

3-870-414-12(2)

LCD Digital Color TV

Operating Instructions

KDL-40S4100
KDL-46S4100

Model:
KDL-46S4100
Serial: [redacted]

BRAVIA

© 2008 Sony Corporation

Owner's Record

The model and serial numbers are located at the rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

_____

Serial No.

_____

WARNING

To reduce the risk of fire or electric shock, do not expose this TV to rain or moisture.

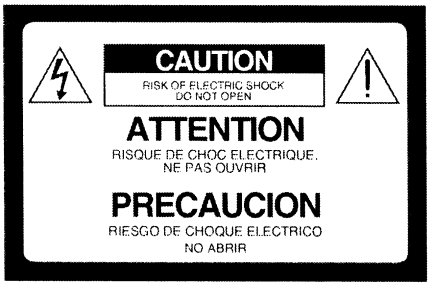

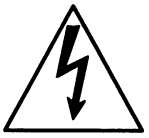

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the TV's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the TV.

The TV shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the TV.

Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

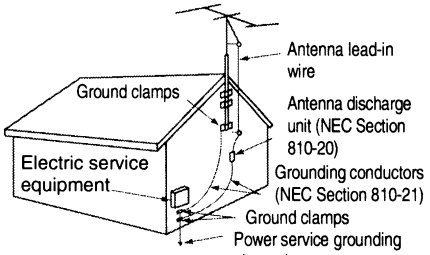
Antenna lead-in wire
Ground clamps
Antenna discharge unit (NEC Section 810-20)
Electric service equipment
Grounding conductors (NEC Section 810-21)
Ground clamps
Power service grounding electrode system (NEC Art 250 Part H)

NEC: National Electrical Code

CAUTION

To prevent electric shock and blade exposure, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted.

Declaration of Conformity

Trade Name: SONY
Model: KDL-40S4100/KDL-46S4100
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo,
San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For customer in Canada

This Class B digital apparatus complies with Canadian ICES-003.

Safety

- ☐ Operate the TV only on 120-240 V AC.
- ☐ Use the AC power cord specified by Sony and suitable for the voltage where you use it.
- ☐ The plug is designed, for safety purposes, to fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- ☐ If you will not be using the TV for several days, disconnect the power by pulling the plug itself. Never pull on the cord.
- ☐ For details concerning safety precautions, see "Important Safety Instructions" on page 3.

Installing

- ☐ The TV should be installed near an easily accessible power outlet.
- ☐ To prevent internal heat buildup, do not block the ventilation openings.
- ☐ Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- ☐ Avoid operating the TV at temperatures below 41°F (5°C).
- ☐ If the TV is transported directly from a cold to a warm location, or if the room temperature changes suddenly, the picture may be blurred or show poor color due to moisture condensation. In this case, please wait a few hours to let the moisture evaporate before turning on the TV.
- ☐ To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the TV in a room where the floor and walls are not of a reflective material.

CAUTION

Use the following Sony TVs only with the following WALL-MOUNT BRACKET or TV-stand.

	Sony TV Model No.	
	KDL-40S4100	KDL-46S4100
Sony Wall-Mount Bracket Model No.	SU-WL500	
Sony TV-Stand Model No.	WS-S10LS SU-FL300M	WS-S10LS SU-FL300M SU-FL300L

Use with other WALL-MOUNT BRACKET or TV-stand may cause instability and possibly result in injury.

To Customers

Sufficient expertise is required for installing the specified TV. Be sure to subcontract the installation to Sony dealer or licensed contractors and pay adequate attention to safety during the installation.

Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

Trademark Information

Macintosh is a trademark of Apple Inc., registered in the U.S. and other countries.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Blu-ray Disc is a trademark.

"BRAVIA", BRAVIA and ▣ are trademarks or registered trademarks of Sony Corporation.

"PLAYSTATION" is a registered trademark and "PS3" is a trademark of Sony Computer Entertainment Inc.

ENERGY STAR

HIGH-DEFINITION TELEVISION

DOLBY DIGITAL

Important Safety Instructions

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

(Continued)

MOISTURE

To reduce the risk of fire or electric shock, do not expose this TV to rain or moisture.

- ☐ The TV must never be exposed to dripping, splashing, or spilling liquids of any kind.
- ☐ Do not place liquid filled objects such as a vase or potted plant on the TV.
- ☐ Do not use a power line operated TV set near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, wet basement or near a swimming pool, etc.

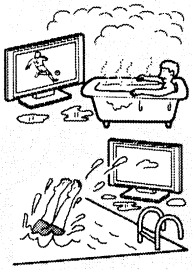

CLEANING

When cleaning, be sure to unplug the power cord to avoid any chance of electric shock.

- ☐ Clean the cabinet of the TV with a dry soft cloth.



- ☐ Wipe the LCD screen gently with a soft cloth.
- ☐ Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- ☐ If using a chemically pretreated cloth, please follow the instruction provided on the package.
- ☐ Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- ☐ Periodic vacuuming of the ventilation openings is recommended to ensure to proper ventilation.

VENTILATION

The ventilation openings in the TV are necessary to ensure reliable operation of the TV and to protect it from overheating.

- ☐ Do not block or cover the ventilation openings with cloth or other materials.

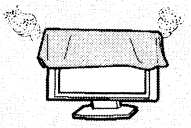

- ☐ Never place the TV on a bed, sofa, rug or other similar surface where ventilation openings may be blocked.

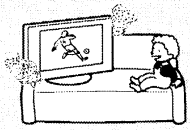

- ☐ Unless proper ventilation is provided, the TV may accumulate dust and cause damage.
- ☐ Never allow liquid or solid objects to fall into the ventilation openings.

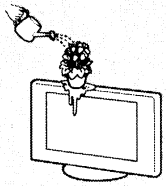

- ☐ If any liquid or solid object falls inside the TV unplug the TV immediately and have it checked by qualified service personnel before operating it further.
- ☐ Never push objects of any kind into the TV through the ventilation openings as they may come in contact with dangerous voltage points or short out parts that could result in a fire or an electric shock.

Allow adequate space around the TV set to ensure proper air circulation.

- ☐ Never place the TV in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

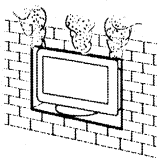

Leave some space around the TV set as shown below. Otherwise, air-circulation may be inadequate and cause overheating, which may cause a fire or damage to the TV set.

Installed on the wall

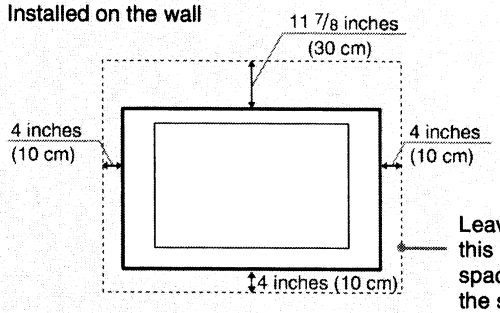

Installed with stand

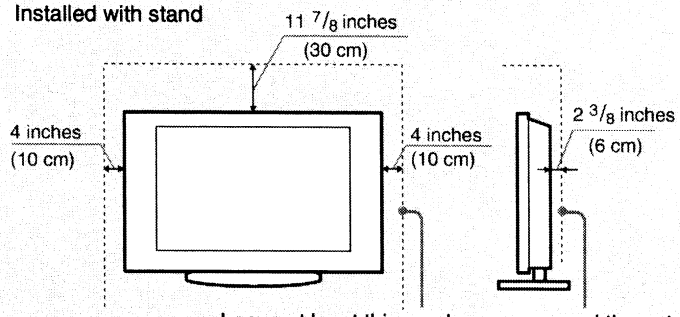

Never install the TV set as follows:

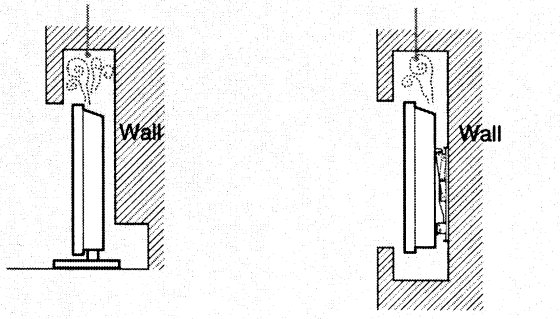

CARRYING THE TV

Carry the TV in the specified manner

To avoid dropping the TV and causing serious injury, be sure to follow these guidelines:

- ☐ Before carrying the TV, disconnect all cables.
- ☐ Carrying the large size TV requires two or more people.
- ☐ When you carry the TV, place your hand as illustrated and hold it securely. Do not put stress on the LCD panel.
- ☐ When carrying the TV, do not subject it to shocks or vibration, or excessive force.

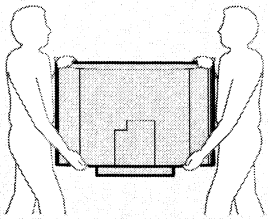

- ☐ When lifting or moving the TV, hold it firmly from the bottom. Place your palm directly underneath but do not squeeze the front panel or recessed area.

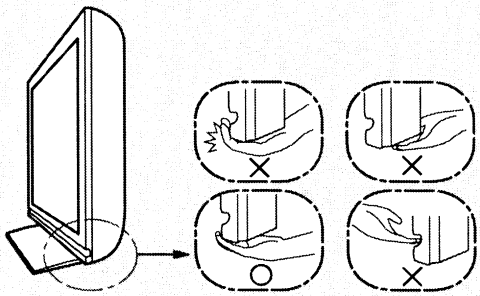

- ☐ When carrying the TV, to avoid pinching your hands or fingers do not put your hands between the TV and stand, or hold the bottom corner of the TV.

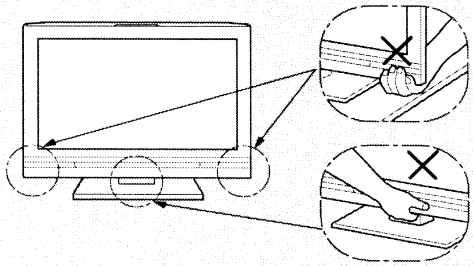

INSTALLATION

The TV should be installed near an easily accessible AC power outlet.

- ☐ Do not install the TV face up or down, upside down or on its side.
- ☐ Do not install the TV in hot, oily, humid, or excessively dusty places.
- ☐ Do not install the TV in places subject to extreme temperature, such as in direct sunlight, near a radiator or a heating vent. The TV may overheat in such conditions and can cause deformation of the enclosure and/or cause TV malfunction.

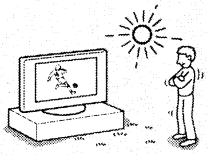

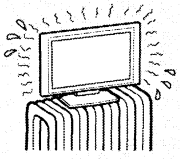

- ☐ Do not install the TV in a place exposed to direct air conditioning; moisture may condense inside and may cause TV malfunction.

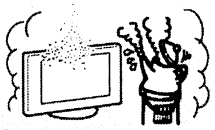

- ☐ Do not install the TV where it may be exposed to mechanical vibration.
- ☐ Do not install the TV where insects may enter.
- ☐ Do not install the TV in a location where it may protrude, such as on or behind a pillar, or any place you might bump your head or receive bodily injury.
- ☐ To prevent fire keep flammable objects or open flame (e.g. candles) away from the TV.
- ☐ Do not place optional equipment on top of the TV.

Prevent the TV from toppling over

Take measures to prevent the TV from toppling over and causing injury, damage to the TV and property.

- ☐ Secure the TV to a wall and/or stand.
- ☐ Never install the TV on unstable and/or uneven surfaces.
- ☐ Do not allow children to climb on or play with furniture and TV sets.
- ☐ Do not install the TV on furniture that can easily be used as steps, such as a chest of drawers.
- ☐ Care should be taken to install the TV where it cannot be pushed, pulled over, or knocked down.
- ☐ Care should be taken to route all AC power cords and connecting cables so that they cannot be pulled or grabbed by curious children.

Medical institutions

Do not place this TV in a place where medical equipment is in use. It may cause a medical equipment malfunction.

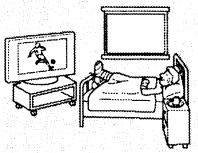

Outdoor use

Do not install this TV outdoors. The TV should not be exposed to rain or direct sunlight in order to avoid damage and possible fire or electric shock.

Do not install this TV in a vehicle, ship or other vessel

- ☐ Excessive bumping motion of a moving vehicle or continuous swaying motion on a boat may cause the TV to fall down and cause injury.

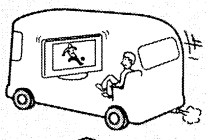

- ☐ Exposing the TV to seawater may cause a fire, electric shock or damage to your TV.

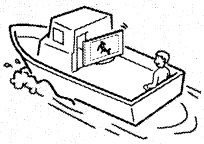

Magnetic influence

- ☐ This TV contains a strong magnet in the speaker unit that generates a magnetic field. Keep any items susceptible to magnetic fields away from the speaker.
- ☐ Electro-magnetic radiation emitted from optional equipment installed too closed to the TV may cause picture distortion and/or noisy sound.

(Continued)

Wall-mount use

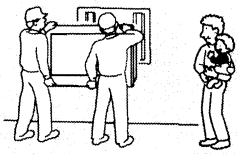

- ☐ Wall-mount installation requires the use of a Wall-Mount Bracket. When installing or removing the TV and the Wall-Mount Bracket, be sure to use qualified contractors. If not properly secured during installation or removal from the Wall-Mount Bracket, the TV may fall and cause serious injury.
- ☐ Be sure to follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.
- ☐ Be sure to attach the brackets with the specified parts supplied with the Wall-Mount Bracket.
- ☐ Do not hang the TV from the ceiling. It may fall and cause serious injury.
- ☐ Do not hang anything on the TV.
- ☐ Do not allow children to climb on the TV.

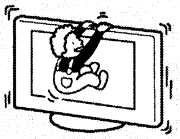

AC POWER CORD

- ☐ Do not touch the AC power cord and its plug with wet hand, it may cause electric shock.

- ☐ When disconnecting the AC power cord, grasp the plug and disconnect from the wall outlet first. Do not pull by the cord.

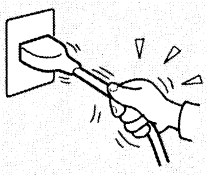

- ☐ Keep the power cord away from heat sources.

A TV set with a three-wire grounding type AC power cord plug must be connected to an AC power outlet with a protective earthing connection.

- ☐ Do not convert or damage the AC power cord.
- ☐ Consult your electrician to have the outlet changed to suit your TV.

Subjecting the AC power cord to wear and/or abuse can damage the AC power cord and your TV.

- ☐ Do not place the TV where the power cord can be easily pinched, bent, twisted, or catch your feet.

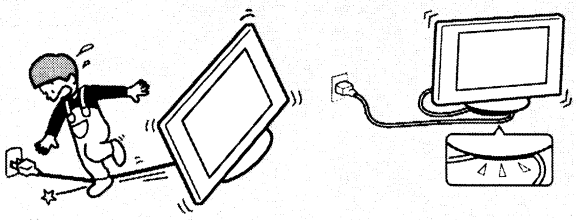

- ☐ Do not allow anything to rest on or roll over the cord.
- ☐ Before connecting cables, be sure to unplug the AC power cord for your safety.
- ☐ Do not move the TV with the AC power cord (or other cables such as audio and video) connected.
- ☐ Use only an original Sony AC power cord with your TV; no brand substitution is allowed.
- ☐ Do not use AC power cord supplied with the TV with any other equipment.

- ☐ Never use a damaged AC power cord. A damaged AC power cord can cause a short-circuit, which may result in a fire or electric shock.

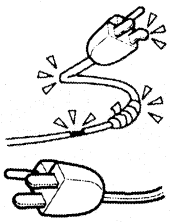

Do not use a damaged or poorly fitting AC power outlet as your TV's power source.

- ☐ Insert the plug fully into the outlet. If it is loose, it may cause arcing and result in a fire.

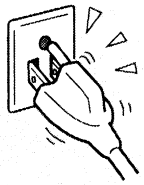

- ☐ Do not overload the same AC power outlet.

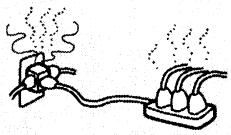

Unplugging the AC power cord from the wall outlet will completely remove power from the TV.

- ☐ During lightning storms or when the TV is left unattended and unused for extended periods of time, the AC power cord should be unplugged from the wall outlet. This will avoid possible damage to your TV. Also unplug the antenna to prevent damage to the TV.

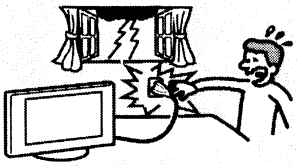

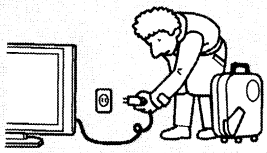

- ☐ For energy conservation and safety reasons, practice unplugging the AC power cord from the AC power outlet.

Clean the AC power plug

Unplug the AC power plug and clean it occasionally to avoid dust from accumulating. While cleaning, look for signs of damage. A damaged AC power cord should never be used.



ACCESSORIES

Keep small accessories out of children's reach. Use only the specified accessories with this TV.

Volume Adjustment

- ☐ When using headphones, adjust the volume to avoid excessive audio levels from causing possible hearing loss.

BATTERIES

Your remote control batteries are consumables.

- ☐ To preserve our environment, dispose of used batteries according to your local laws or regulations.
- ☐ Do not dispose of batteries in a fire.
- ☐ Do not short-circuit, disassemble or overheat the batteries.
- ☐ Replace only with the same or equivalent type of batteries. Using incorrect replacement batteries can lead to an explosion.

LCD SCREEN

- ☐ Although the LCD screen is made with high-precision technology and has effective pixels of 99.99% or more, black dots or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD panel and is not a malfunction.
- ☐ The LCD screen is made with high-precision technology and to achieve a high level of performance and picture quality, this TV's backlight setting is set to maximize the brightness of the TV. However, uneven brightness may be observed when the LCD TV is viewed in a dark ambient without an input source or blank screen. This condition is normal and not a malfunction of the TV. Changing the Picture mode, Backlight setting, or turning on the Power Management will improve this condition.
- ☐ To avoid damaging the LCD panel, do not expose the LCD screen to direct sunlight.
- ☐ Do not push or scratch the LCD screen, or place objects on top of the TV. The images may be uneven or the LCD panel may be damaged.
- ☐ If the TV is used in a cold place, smear may occur in the picture or the picture may become dark. This does not indicate a failure. These phenomena improve as the temperature rises.
- ☐ Ghosting may occur when still pictures are displayed continuously. It should disappear after a few moments.
- ☐ The LCD screen and enclosure get warm when the TV is in use. This is not a malfunction.
- ☐ Avoid spraying insect repellent with volatile material on the LCD screen.
- ☐ Avoid prolonged contact with rubber or plastic material to the LCD screen.

Broken screen panel

Do not throw anything at the TV as the impact can cause the LCD screen glass to crack, break or scatter.

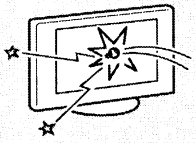

- ☐ If damage occurs to the LCD panel, small traces of liquid crystal sandwiched between the glass may be found on scattered broken glass.
- ☐ Do not touch the broken glass with bare hands. As with any broken glass pieces, avoid skin contact and exposure to your eyes or mouth. Avoid direct contact with liquid or damp surfaces of the glass as these may have an adverse effect on some people. The contacted area should be rinsed thoroughly with water. If conditions persist, see your doctor.
- ☐ If the surface of the TV cracks, do not touch the TV until you have unplugged the AC power cord. Otherwise electric shock may result.

SERVICING

Do not use the TV if you suspect the TV is damaged or if the TV is damaged.

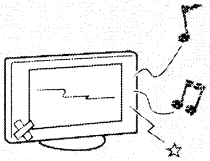

- ☐ Do not attempt to service the TV yourself since opening the cabinet may expose you to dangerous voltage levels or other hazards. Refer all servicing to qualified service personnel.

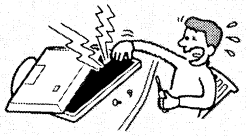

- ☐ If replacement parts are required, acquire a written certification from the service technician which states that adequate replacement parts with the same or similar characteristics as the original parts have been used. Unauthorized substitutions may result in a fire, an electric shock or other hazards.

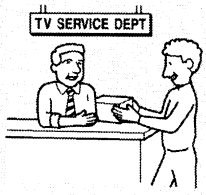

Safety check

- ☐ Upon completion of any TV servicing or repair, ask the service technician to perform routine safety checks as specified by Sony and to certify that the TV is safe to operate. Have a qualified service technician dispose of the TV if it is not safe to operate.

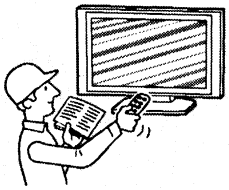

For customers in the United States

Lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronics Industries Alliance (www.eiae.org).

Contents

Getting Started

Welcome to the World of BRAVIA® 10
Picture Quality and Aspect Ratio 10
Assembling the Table-Top Stand 11
Connecting the TV 13
Cable System or VHF/UHF Antenna System 13
Cable System and VHF/UHF Antenna System 13
HD Cable Box/HD Satellite Box 14
PC 15
Other Equipment 16
When Connecting to Optional Equipment 17
Securing the TV 19
Preventing the TV from Toppling 19
Use a Sony TV Stand 19
Recommended Measures to Secure the TV 19
Bundling the Connecting Cables 21
Setting Up the Channel List - Initial Setup 22

Basic Operations

Remote Control 23
TV Controls 26

Using the Menus

Overview of MENU 27
Using the Picture Settings 27
Using the Sound Settings 28
Using the Screen Settings 29
Using the PC Settings 30
Using the Channel Settings 31
Using the Parental Lock Settings 32
Using the Setup Settings 35

Other Information

Troubleshooting 37
Preparation for Wall Mounting 39
PC Input Signal Reference Chart 41
Specifications 42
Index 43

Getting Started

Welcome to the World of BRAVIA®

Thank you for purchasing this Sony LCD Digital Color Television. This manual is for model KDL-40S4100/KDL-46S4100. Be sure to check the supplied accessories against the list on page 42.

Picture Quality and Aspect Ratio

You can enjoy crisp, clear images, smooth movement and high-impact visuals from 1080 HD signals. When you compare a high-definition signal to a standard analog signal, you will notice a big difference.

High-definition and standard-definition signals are transmitted with different aspect ratios (the width-to-height ratio of the image). HDTV uses a wider screen than conventional standard-definition TV.

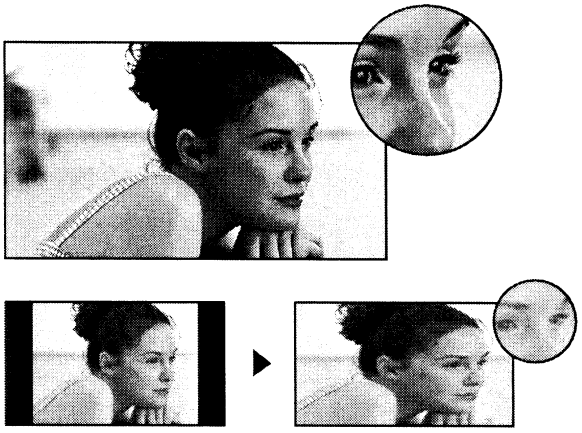

16:9 (high-definition) source

Most HDTV signals use a wide screen aspect ratio of 16:9. The 16:9 fills your **BRAVIA** screen, maintaining a crisp, clear, vivid picture.

4:3 (standard-definition) source

Most standard-definition signals use a boxy 4:3 aspect ratio. When a 4:3 image is displayed on an HDTV, you will see black bars on the sides. The picture quality may not be as sharp as with HD sources.

✍ You can use the Wide Mode function of the TV to adjust the 4:3 image to fit the entire screen (see pages 24, 29 and 30).

Assembling the Table-Top Stand

Follow the assembling steps required to attach the Table-Top Stand.

1 Take out the Table-Top Stand and screws from the carton. The screws are found in the accessory bag.

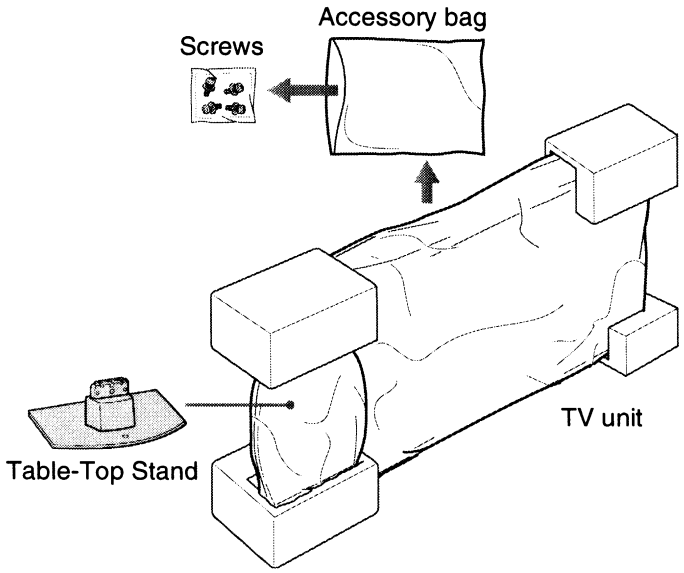

✍ Put your hands into the package, when taking out the TV from the carton.

2 Place the Table-Top Stand onto a level and stable surface.

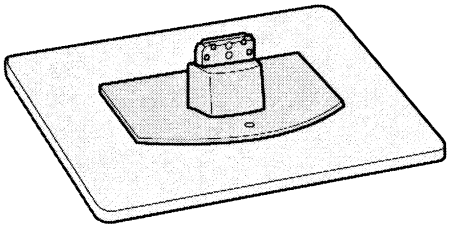

(Continued)

3 Gently slide the TV unit onto the neck of the Table-Top Stand and align the screw holes.

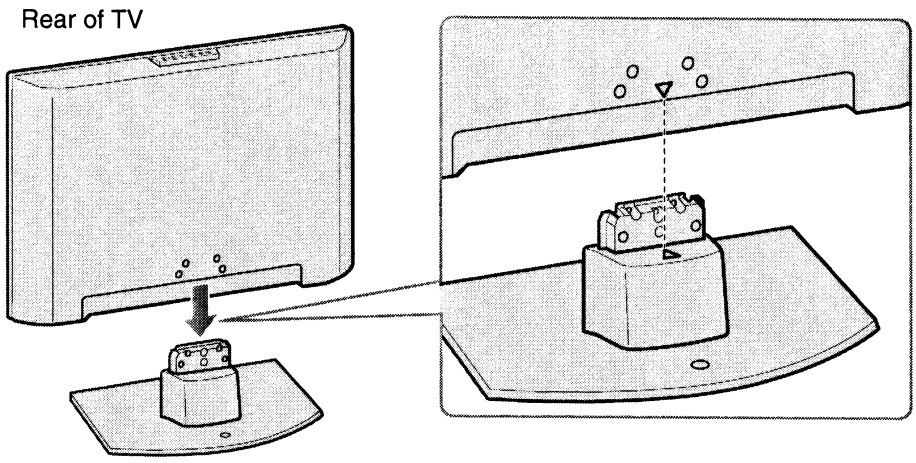

✍ Do not put stress on the LCD panel or the frame around the screen.

✍ Be careful not to pinch your hands or the AC power cord when you install the TV to the Table-Top Stand.

4 Use the supplied screws to attach the TV unit to the Table-Top Stand.

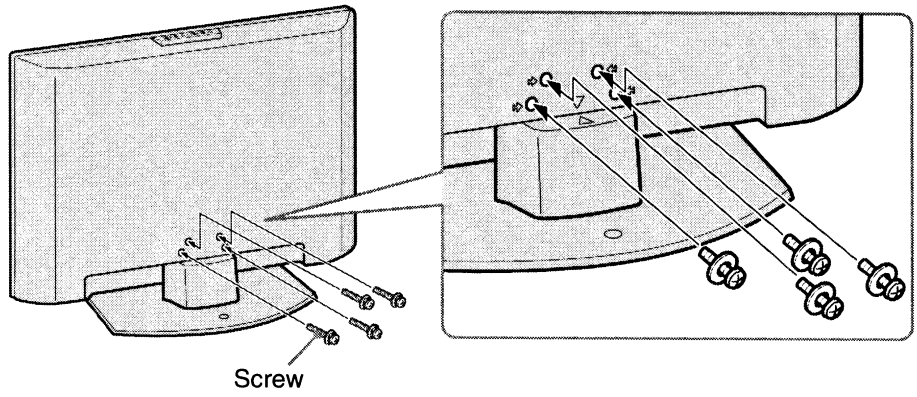

✍ If an electric screwdriver is used, set the torque to tighten at approximately 1.5 N·m {15 kgf·cm}.

Connecting the TV

Cable System or VHF/UHF Antenna System

You can enjoy high-definition and standard-definition digital programming (if available in your area) along with standard-definition analog programming.

✍ This TV is capable of receiving unscrambled digital programming for both cable (QAM and 8VSB) and external VHF/UHF antenna (ATSC).

✍ It is strongly recommended that you connect the CABLE/ANTENNA input using a 75-ohm coaxial cable to receive optimum picture quality. A 300-ohm twin lead cable can be easily affected by radio frequency interference, resulting in signal degradation.

Cable or VHF/UHF (or VHF only)



Cable System and VHF/UHF Antenna System

Use an optional A-B RF switch (not supplied) to switch between the cable and over-the-air antenna programming, as indicated below.

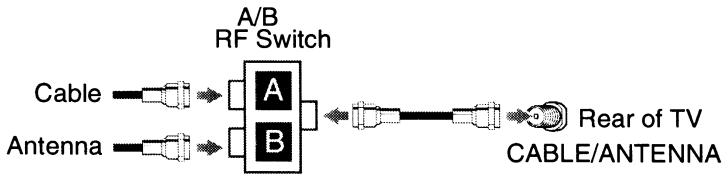

✍ Be sure to set the Cable setting to On or Off in the Channel settings for the type of input signal you choose (see page 31).

HD Cable Box/ HD Satellite Box

You can enjoy high-definition programming by subscribing to a high-definition cable service or a high-definition satellite service. For the best possible picture, make sure you connect this equipment to your TV via the HDMI or component video (with audio) input on the back of your TV.

Shown with HDMI Connection

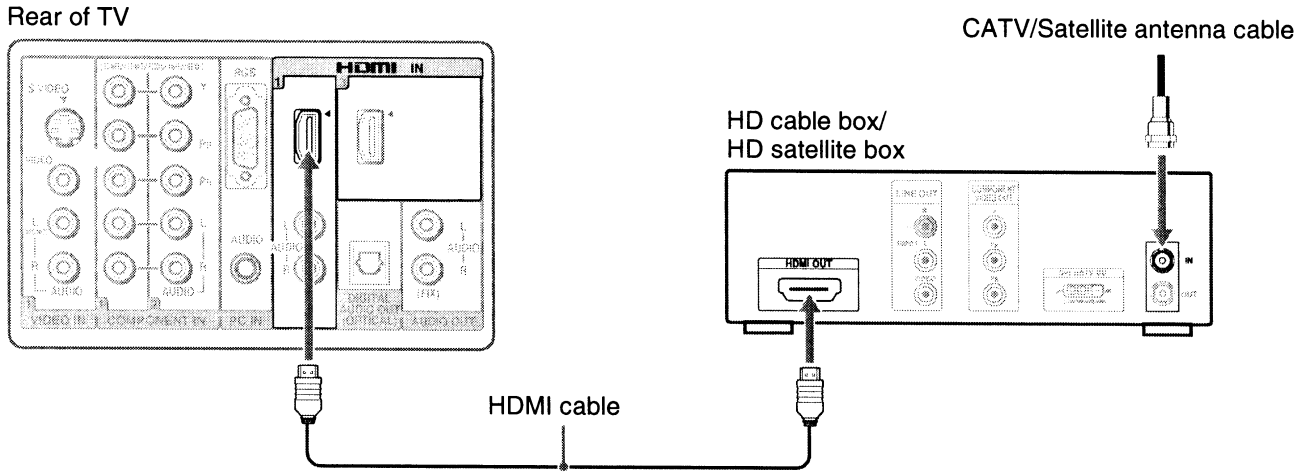

Shown with DVI Connection

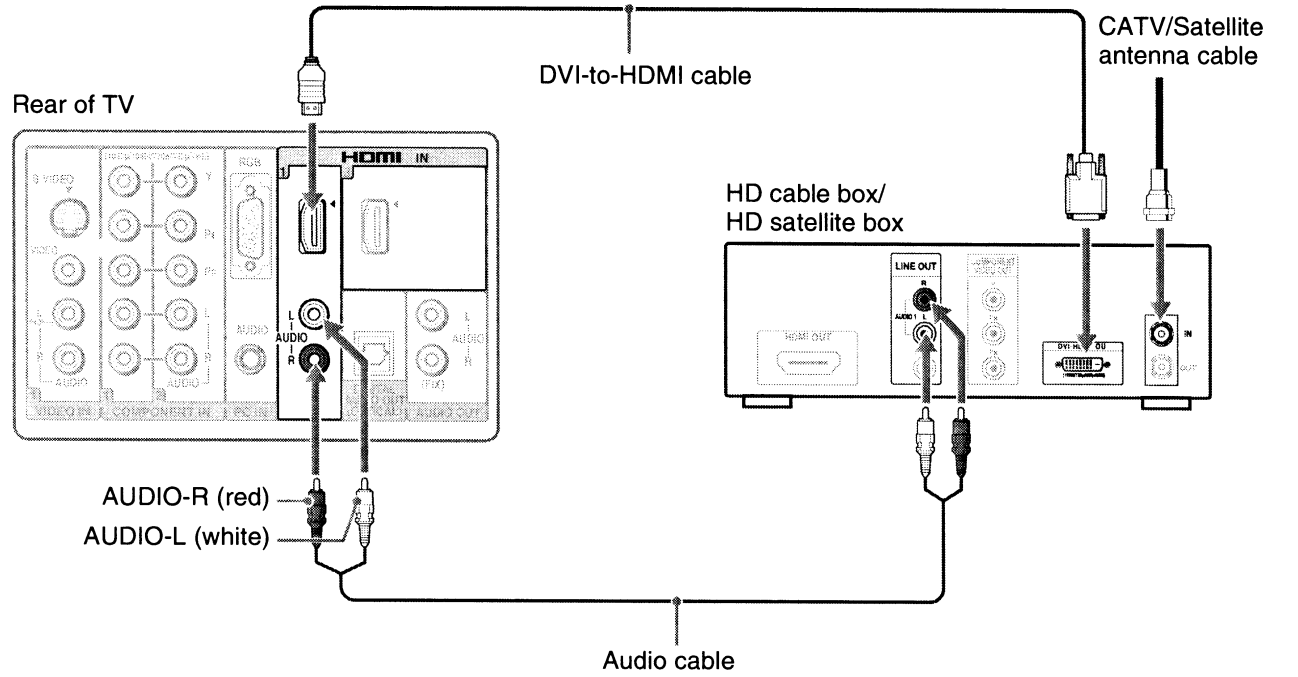

If the equipment has a DVI jack and not an HDMI jack, connect the DVI jack to the HDMI IN 1 (with DVI-to-HDMI cable or adapter) jack and connect the audio jack to the AUDIO IN (L/R) jacks of HDMI IN 1. For details, see page 17.

Shown with Component Connection

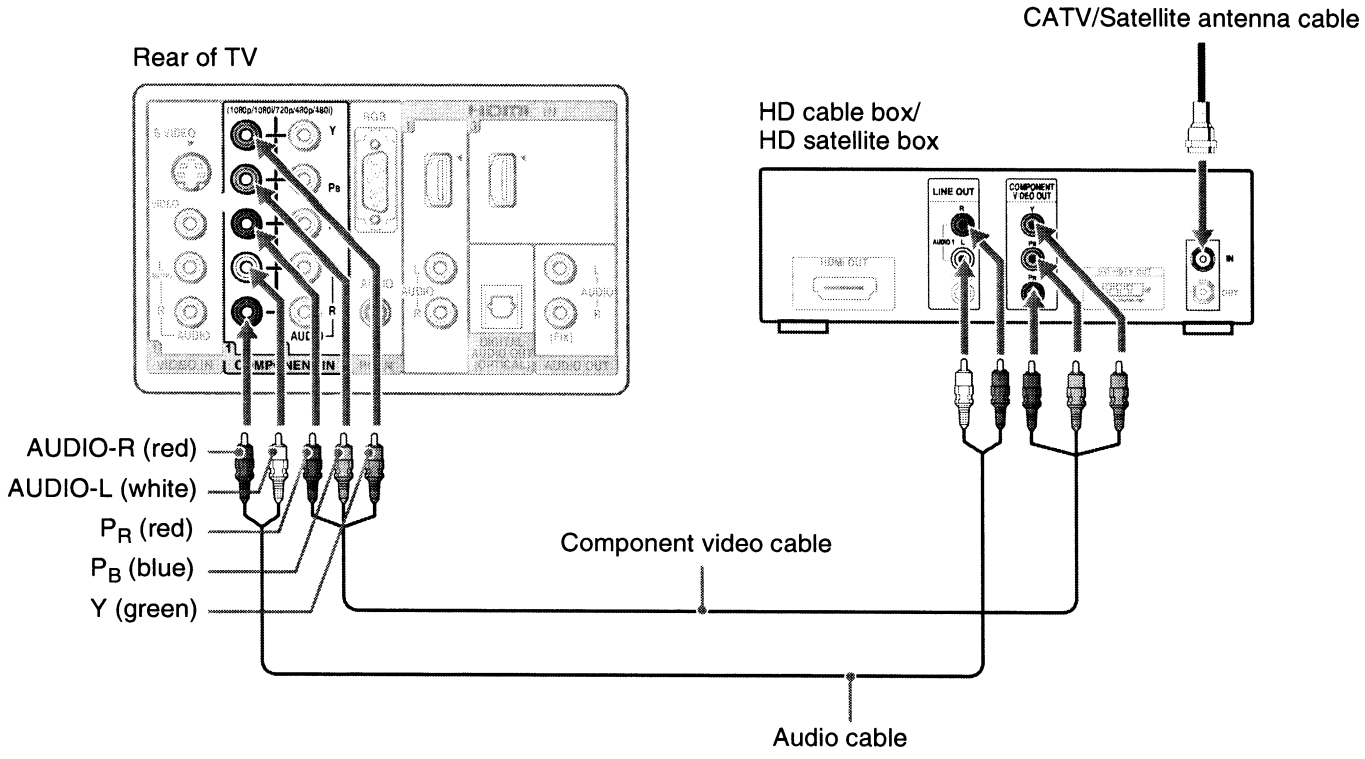

PC

Use the TV as a monitor for your PC as shown below. Shown below is the HD15 to HD15 connection. This TV can also be connected to a PC with a DVI or HDMI output. (Refer to the separate Quick Setup Guide.)

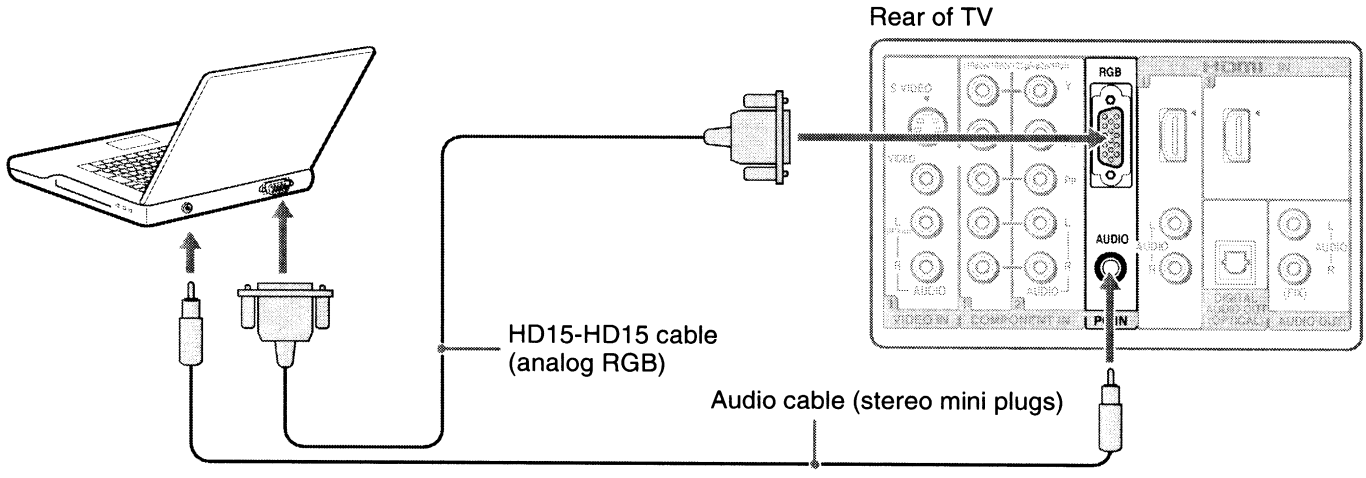

✍ Connect the PC IN jack to the PC using an HD15-HD15 cable with ferrite core (analog RGB) and audio cable (see page 18).

✍ If the PC is connected to the TV and no signal has been input from the PC for more than 30 seconds, the TV enters the standby mode automatically (see page 30).

Other Equipment

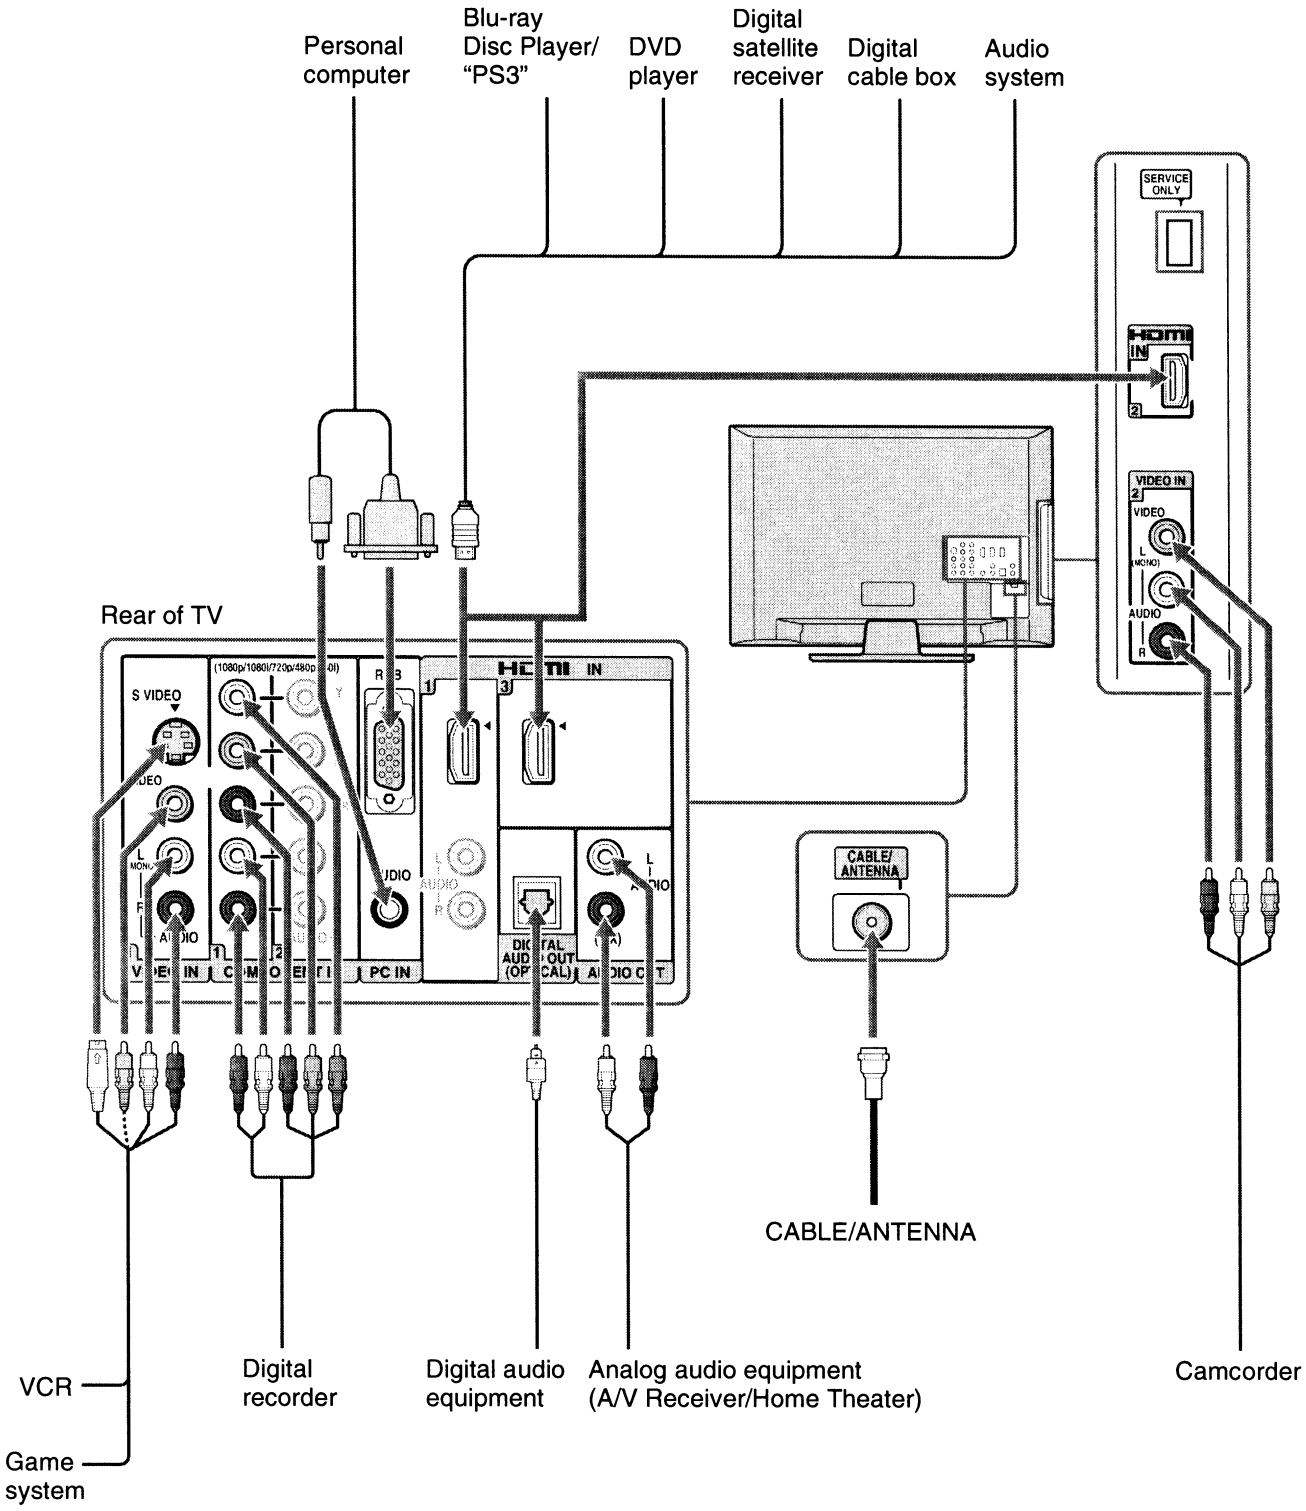

✍ Refer to the Quick Setup Guide (supplied) when connecting other equipment to your TV.

When Connecting to Optional Equipment

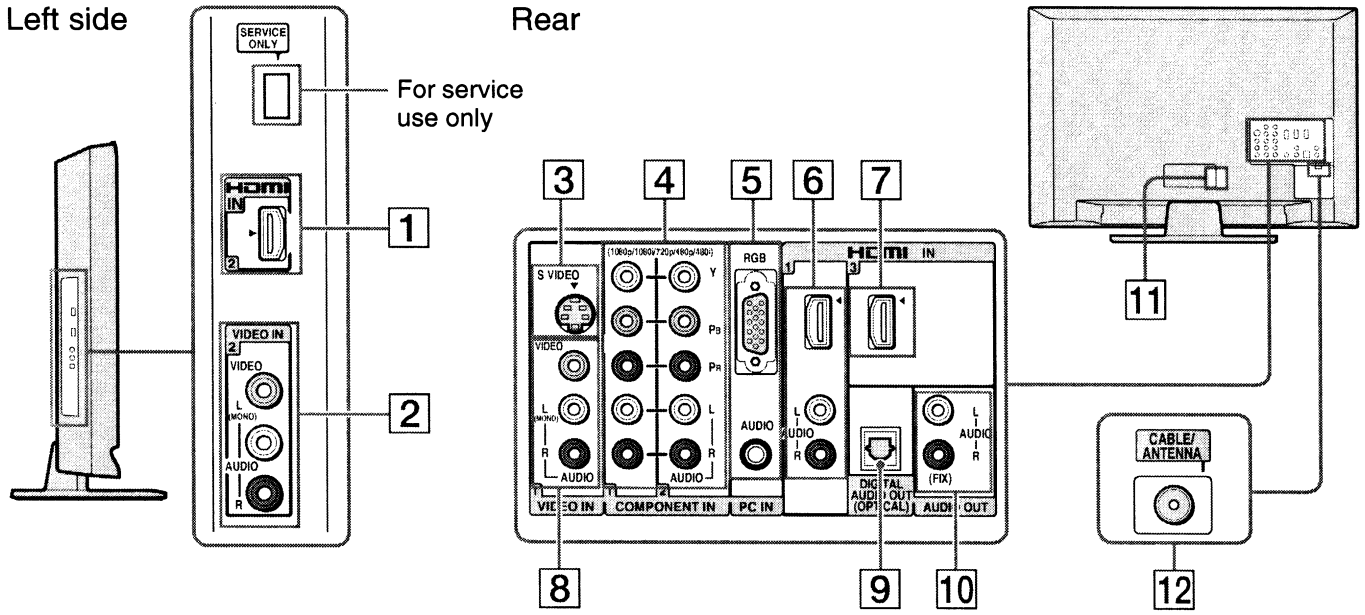

Item		Description
1	HDMI IN 2	HDMI (High-Definition Multimedia Interface) provides an uncompressed, all-digital audio/video interface between this TV and any HDMI-equipped audio/video equipment, such as a set-top box, DVD player, and A/V receiver. HDMI supports enhanced, or high-definition video, plus digital audio.
6	HDMI IN 1 HDMI/ L-AUDIO-R	If the equipment has a DVI jack and not an HDMI jack, connect the DVI jack to the HDMI IN 1 (with DVI-to-HDMI cable or adapter) jack, and connect the audio jack to the L-AUDIO-R jacks of HDMI IN 1. (DVI connector is for video signals only.)
7	HDMI IN 3	

DVI-to-HDMI cable



HDMI adapter



Audio cable

✍ Be sure to use only an HDMI cable that bears the HDMI logo.

✍ When connecting a DVI-equipped PC to an HDMI jack, also connect an Audio cable between the PC and R-AUDIO-L jack.

2	VIDEO IN 2 VIDEO/ L(MONO)-AUDIO-R	Connect to the composite video and audio output jacks on your camcorder or other video equipment such as video game equipment.

✍ If you have mono equipment, connect its audio output jack to the TV's L (MONO) audio input jack.

(Continued)

Item		Description
3	VIDEO IN 1 S VIDEO	Connects to the S VIDEO output jack on your camcorder or other video equipment that has S VIDEO. Provides better picture quality than composite video (2/8).
8	VIDEO IN 1 VIDEO/ L(MONO)- AUDIO-R	Connect to the composite video and audio output jacks on your A/V equipment such as a VCR or other video equipment. A second composite video and audio (VIDEO 2) is located on the left side panel of the TV.
4	COMPONENT IN 1/2 (1080p/ 1080i/720p/ 480p/480i)/ L-AUDIO-R	Connect to your DVD player's or digital set-top box's component video (YP_BP_R) and audio (L/R) jacks. Component video provides better picture quality than the S VIDEO (3) and the composite video (2/8) connections.
5	PC IN (RGB/AUDIO)	Connect to a personal computer's video output connector using HD15-HD15 cable (analog RGB, not supplied). Can also be connected to other analog RGB devices. See "PC Input Signal Reference Chart" on page 41 for the signals that can be displayed. ✍ For some Apple Macintosh computers, it may be necessary to use an adapter (not supplied). If this is the case, connect the adapter to the computer before connecting the HD15-HD15 cable. ✍ If the picture is noisy, flickering or not clear, adjust the Phase and Pitch of the PC Settings on page 30.
9	DIGITAL AUDIO OUT (OPTICAL)	Connects to the optical audio input of a digital audio equipment that is PCM/Dolby digital compatible.
10	AUDIO OUT L-AUDIO-R (FIX)	Connect to the left and right audio input jacks of your audio or video equipment. You can use these outputs to listen to your TV's audio through your stereo system.
11	AC IN	Connects the supplied AC power cord.
12	CABLE/ ANTENNA	RF input that connects to your Cable or VHF/UHF antenna.

* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

✍ VIDEO IN 1 is equipped with S VIDEO. S VIDEO will be selected when both composite and S VIDEO are connected.

✍ Component video (YP_BP_R) or HDMI connection is necessary to view 480i, 480p, 720p, 1080i and 1080p formats. Note that this TV displays all picture format types in a resolution of 1,920 dots x 1,080 lines.

Securing the TV

Sony strongly recommends taking measures to prevent the TV from toppling over; as unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling

- ❑ Secure the TV to a wall and/or stand.
- ❑ Do not allow children to play or climb on furniture and TV sets.
- ❑ Avoid placing or hanging items on the TV.
- ❑ Never install the TV on:
  - slippery, unstable and/or uneven surfaces.
  - furniture that can easily be used as steps, such as a chest of drawers.
- ❑ Install the TV where it cannot be pulled, pushed, or knocked over.
- ❑ Route all AC power cords and connecting cables so that they are not accessible to curious children.

Use a Sony TV Stand

Use a Sony specified TV stand (see page 2) and follow the instruction manual provided with the Sony TV stand.
If a Sony specified TV stand is not used, consider the following recommended measures.

Recommended Measures to Secure the TV

1 Secure the Stand for the TV.

Make sure the TV stand can adequately support the weight of the TV.
Use two angle braces (not supplied) to secure the stand.
For each angle brace use the appropriate hardware to:
- attach one side of the angle brace to the wall stud.
- attach the other side to the TV stand.

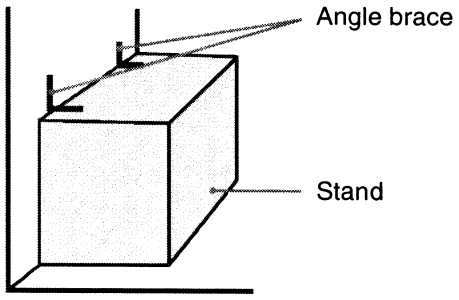

(Continued)

2 Secure the TV to the Stand.

Use the optional hardware listed below (not supplied):

- M6 x 12-18mm anchor bolt (screwed into the TV's Table-Top Stand).
- A screw or similar (attach it to the TV stand).
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

An alternative way to secure the TV is with an optional Sony Support Belt Kit.

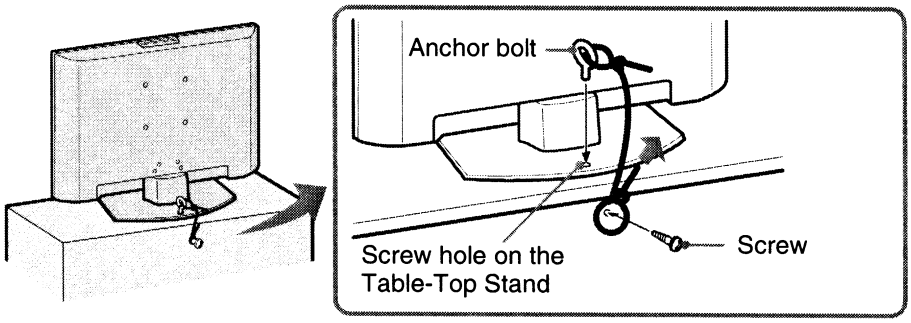

✍ Contact Sony Customer Support to obtain the optional Support Belt Kit by providing your TV model name.

– For United States call: 1-800-488-7669 or visit: www.sony.com/accessories

– For Canada call: 1-877-899-7669

3 Anchor the TV to the Wall.

Use the hardware listed below (not supplied).

- Two M6 x 12-18mm anchor bolts (screw into the top-most wall-mount holes located on the rear of the TV).
- Rope or chain (attach to one M6 anchor bolt).
- Wall-anchor (attach to the wall stud) strong enough to support the weight of the TV (pass the rope through the wall-anchor, then attach to the other M6 anchor bolt).

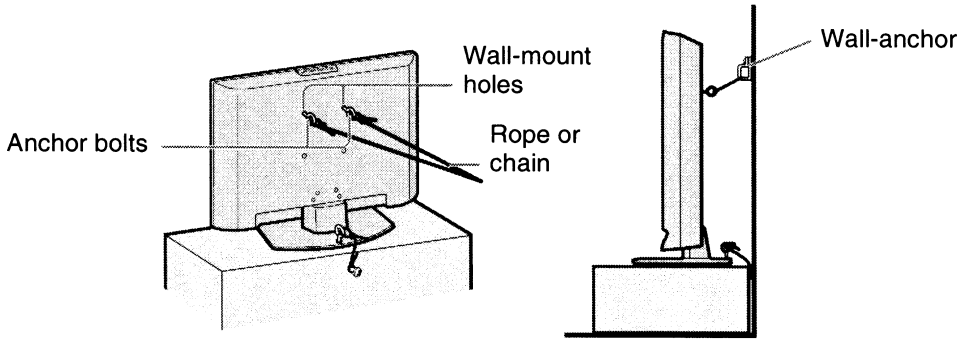

✍ Measure 2 provides minimal protection against the TV toppling over. For further protection, follow all three measures recommended above.

✍ If an electric screwdriver is used, set the torque to tighten at approximately 2.0 N·m {20 kgf·cm}.

Bundling the Connecting Cables

You can bundle the connecting cables with the supplied cable band as illustrated below.

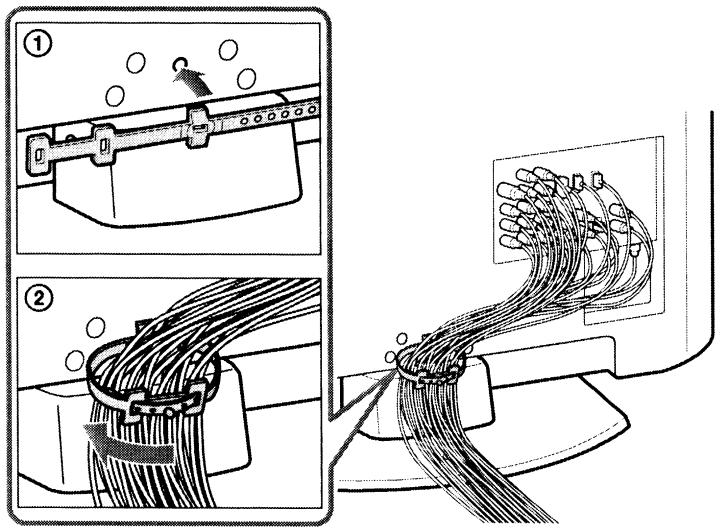

✍ Do not bundle the AC power cord with other connecting cables.

Setting Up the Channel List - Initial Setup

After you finish connecting your TV, you need to run Initial Setup, which automatically sets up available channels. The Initial Setup screen appears when you turn on your TV for the first time. If you do not want to set up the channels at this time, you can do it later by selecting the Auto Program option in the Channel settings (see page 31).

1 Press POWER ◯ to turn on the TV.

The Initial Setup screen appears.

2 Press ▲/▼ to highlight the desired language and ⊕ to select.

3 The message "First please connect cable or antenna. Allow 50+ minutes for completion." and "Start auto program now?" appear, make sure you already connected cable or antenna, then select OK to start Auto Program. If you want to start Auto Program later, select Cancel.

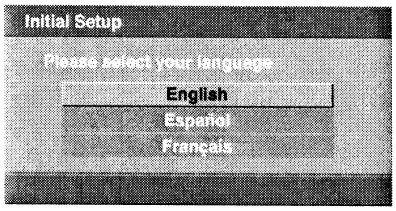

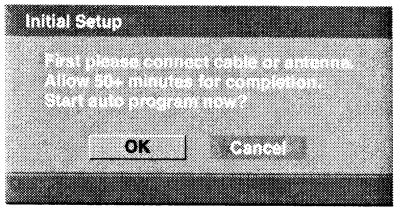

✍ If you have cable and antenna available, please connect cable first.

4 The scanning of channels will start. If you want to stop and run Auto Program later, select Cancel.

5 When Auto Program is complete, press ⊕ to continue.

6 If the Initial Setup programming found cable channels, you will be able to scan antenna channels as well. Connect the antenna using an A-B RF switch (not supplied) and change the switch to antenna then start Auto Program to search antenna channels. If the Initial Setup programming found antenna channels, the Auto Program process will finish. If you want to scan cable channels, you can do it later using the Channel settings.

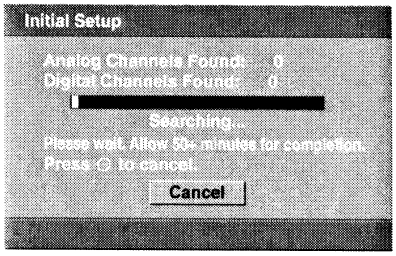

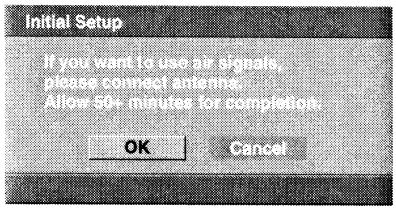

To run Auto Program again at a later time

❑ Use the Auto Program feature as described on page 31.

To display the Picture in your Preferred Aspect Ratio

❑ Select the proper Wide Mode as described on pages 24 and 29.

Remote Control

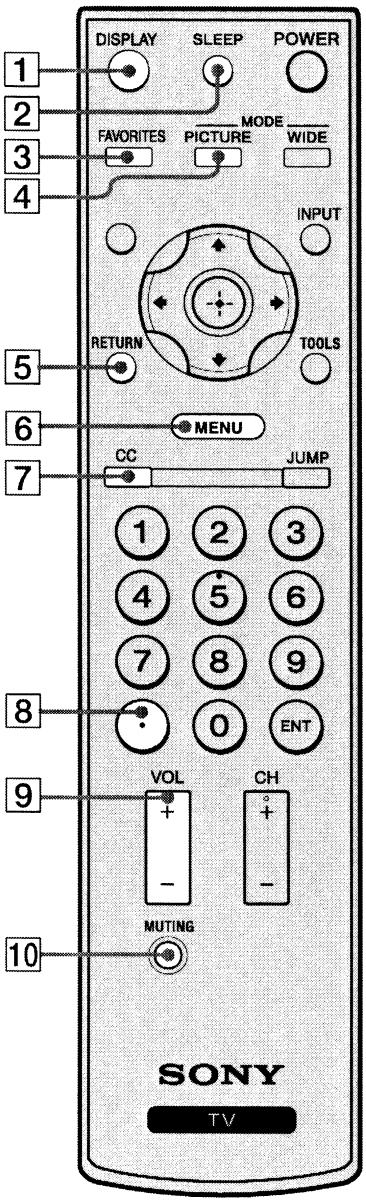

The 5 button and CH + have a tactile dot. Use them as a reference when operating the TV.

Button	Description
1 DISPLAY	Press once to display the current channel number, channel label, program remaining time and Wide Mode. The on-screen display (OSD) will turn off after a few seconds.
2 SLEEP	Press repeatedly until the TV displays the time in minutes (Off, 15, 30, 45, 60, 90 or 120) that you want the TV to remain on before shutting off. To cancel Sleep Timer, press SLEEP repeatedly until Off appears.
3 FAVORITES	Press once to display the stored Favorites list. You can store up to 8 channels and/or external inputs in your Favorites list. **How to Add to Favorites** While tuned to the channel you want to add to the list, press FAVORITES and highlight "Add to Favorites", then press ⊕. ✍ Your Favorites list will be cleared each time you run Auto Program (see pages 22 and 31 for Auto Program).
4 PICTURE	Press repeatedly to cycle through the available picture modes: Vivid, Standard, Custom. The picture modes can also be accessed in the Picture settings. For details, see "Using the Picture Settings" on page 27.
5 RETURN	Press to go back to the previous screen when displaying MENU items and settings.
6 MENU	Press to display the MENU with TV functions and settings. See "Overview of MENU" on page 27.
7 CC	Press to turn on and off Closed Captions (CC). To change or customize CC Display, see page 36.
8 ⊙	Use with 0-9 and ENT buttons to select digital channels. For example, to enter 2.1, press ②, ⊙, ① and ENT.
9 VOL +/–	Press to adjust the volume.
10 MUTING	Press to mute the sound. Press again or press VOL + to restore the sound.

(Continued)

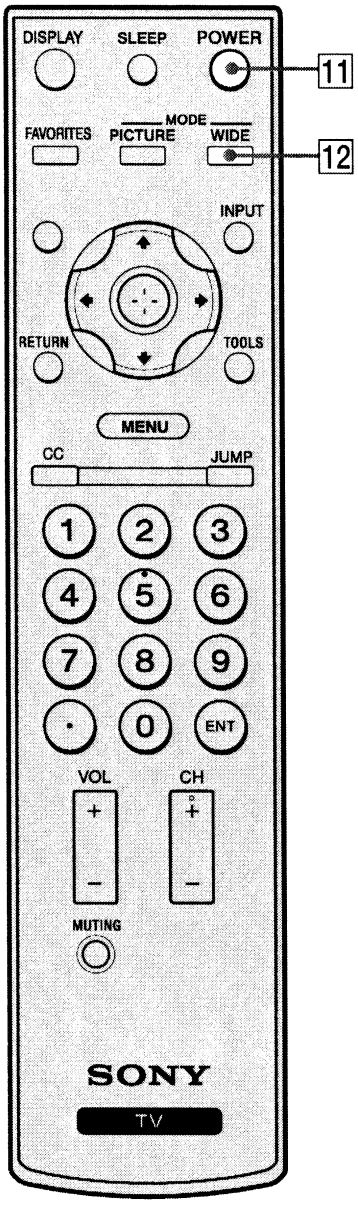

Button	Description
11 POWER	Press to turn on and off the TV.
12 WIDE	Press repeatedly to step through the Wide Mode settings: Wide Zoom, Normal, Full, and Zoom. The Wide Mode settings can also be accessed in the Screen settings. (See page 29.)

Changing the Wide Screen Mode

(For PC timing, see below)

4:3 Original source Standard-definition source	16:9 Original source High-definition source
⬇	⬇
Wide Zoom	**Wide Zoom**
Normal	**Normal** This mode is not available.
Full	**Full**
Zoom	**Zoom**

✍ Normal is not available when you are watching a 720p, 1080i or 1080p source from a component video input, an HDMI input or a digital TV.

Changing the Wide Screen Mode for PC Timing

Incoming PC signal 800 × 600	Incoming PC signal 1280 × 768
⬇	⬇
Normal	**Normal**
Full 1	**Full 1**
Full 2	**Full 2**

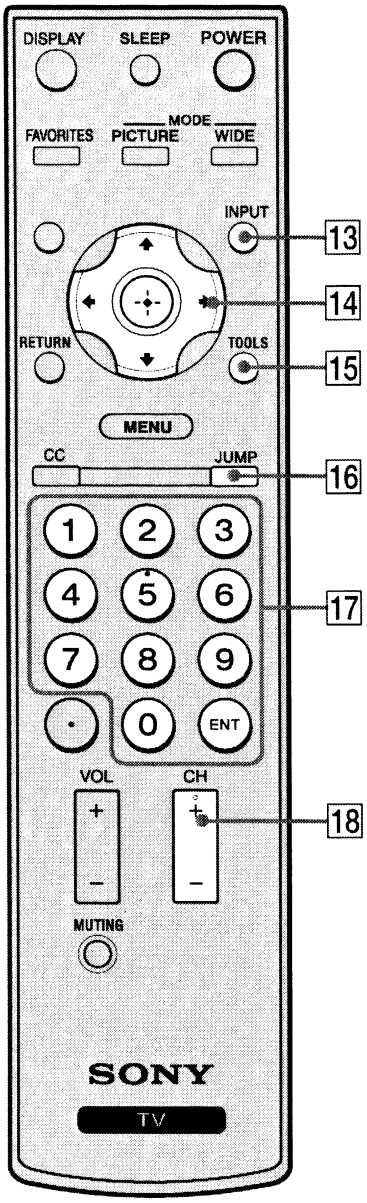

Button	Description
13 INPUT	Press to display the list of external inputs. Press repeatedly to toggle through the inputs. ✍ Inputs can be changed by pressing ↑/↓ and ⊕ while the list of external inputs is displayed. ✍ See page 35 for information about setting up the external inputs labels, including the Skip feature.
14 ↑/↓/←/→ ⊕	Press ↑/↓/←/→ to move the on-screen cursor. Press ⊕ to select/confirm an item.
15 TOOLS	Press to display the Tools Menu that is associated with your current input: analog TV, digital TV or external inputs. (See pages 27, 28, 32 and 36.) While in PC input mode, PIP can be selected from the Tools Menu. The PIP feature allows the viewer to see both PC input and TV channels simultaneously. Main Window (PC) 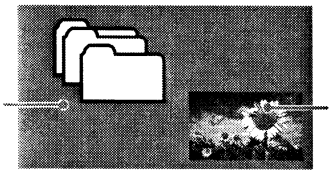 Sub Window (TV channel) ✍ For compatible PC Timings, refer to the PC Input Signal Reference Chart (see page 41). **To Change Channels in the PIP Window** Press CH +/– to change the channel or enter the channel number using the 0-9 numeric buttons. ✍ You may also press JUMP to return to the previously viewed channel. **To Exit from PIP** 1 Press TOOLS. 2 Press ↑/↓ to highlight Exit PIP and press ⊕ to exit. ✍ You may also press RETURN to exit this feature.
16 JUMP	Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected.
17 0 - 9 ENT	Press 0 - 9 to select a channel; the channel changes after two seconds. Press ENT to change channels immediately.
18 CH +/–	Press to scan through channels. To scan quickly through channels, press and hold down either +/–.

✍ Insert two size AA batteries (supplied) by matching the ⊕ and ⊖ on the batteries to the diagram inside the remote control's battery compartment.

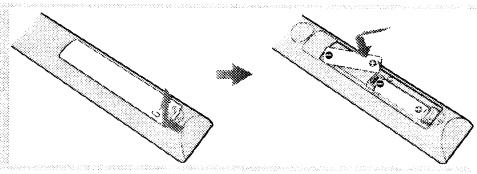

TV Controls

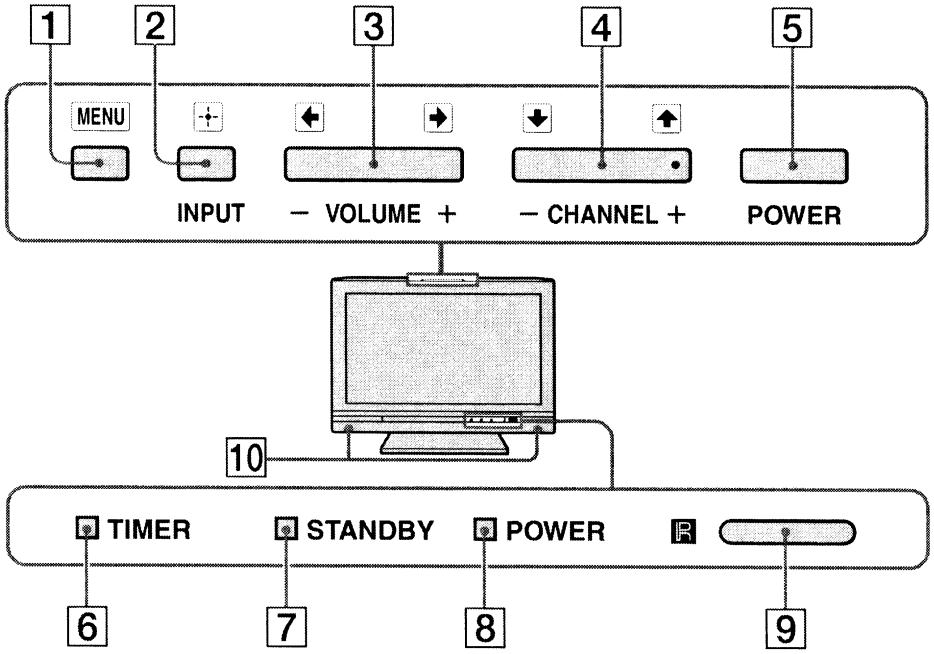

Item		Description
1	MENU	Press to display MENU with TV functions and settings (see "Overview of MENU" on page 27).
2	-⊹- INPUT	Press to display the list of external inputs. Press repeatedly to toggle through the inputs. ✍ Inputs can be changed by pressing ↑/↓ and ⊕ while the list of external inputs is displayed. ✍ See page 35 for information about setting up the external inputs labels, including the Skip feature. In the MENU screen, this button serves as confirming the selection or setting.
3	←——→ – VOLUME +	Press to adjust the volume. In the MENU screen, these buttons serve as left/right buttons.
4	↓——↑ – CHANNEL +	Press to scan through channels. To scan quickly through channels, press and hold down either –/+. In the MENU screen, these buttons serve as up/down buttons.
5	POWER	Press to turn on and off the TV.
6	TIMER LED	Lights up in orange when the sleep timer is set.
7	STANDBY LED	Lights up in red when your TV is in PC power saving mode.
8	POWER LED	Lights up in green when the TV is turned on.
9	(IR) Infrared Receiver	Receives IR signals from the remote control.
10	Speaker	Outputs audio signal.

✍ The CHANNEL + button has a tactile dot. Use it as a reference when operating the TV.

✍ Make sure that the TV is completely switched off before unplugging the power cord.

Using the Menus

Overview of MENU

MENU provides one button access for controlling your TV. It enables you to perform a variety of tasks intuitively with a control panel on the screen rather than a variety of remote control button presses.

Using the Picture Settings

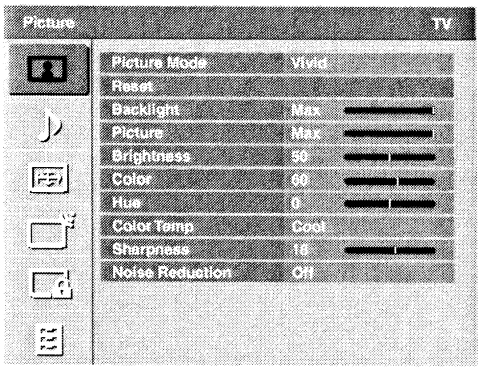

Option	Description	
Picture Mode *Customized picture viewing*	Vivid	Select for enhanced picture contrast and sharpness.
	Standard	Select for standard picture settings. Recommended for home entertainment.
	Custom	Allows you to store your preferred settings.
	✍ You can also access Picture Mode by using the TOOLS button or PICTURE button on the remote control.	
Reset	Resets the current Picture Mode settings to the default values.	
Backlight	Adjust to brighten or darken the backlight.	
Picture	Adjust to increase or decrease picture contrast.	
Brightness	Adjust to brighten or darken the picture.	
Color	Adjust to increase or decrease color intensity.	
Hue	Adjust to increase or decrease the green tones.	
Color Temp *White adjustment*	Cool	Select to give the white colors a bluish tint.
	Neutral	Select to give the white colors a neutral tint.
	Warm	Select to give the white colors a reddish tint.
Sharpness	Adjust to sharpen or soften the picture.	
Noise Reduction	Select to reduce the noise level. Select from High, Medium, Low and Off.	

♪ Using the Sound Settings

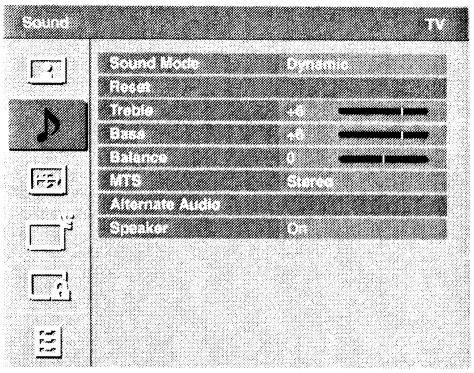

Option	Description	
Sound Mode *Customized sound listening*	Dynamic	Enhances treble and bass.
	Standard	Standard sound optimized for home use.
	Clear Voice	Suitable for spoken dialog.
Reset	Resets the current Sound Mode settings to the default values.	
Treble	Adjust to increase or decrease higher-pitched sounds.	
Bass	Adjust to increase or decrease lower-pitched sounds.	
Balance	Adjust to emphasize left or right speaker balance.	
MTS *Enjoy stereo, bilingual and mono programs*	Stereo	Select for stereo reception when viewing a program broadcast in stereo.
	Auto SAP	Select to automatically switch the TV to second audio programs when a signal is received. If no SAP signal is present, the TV remains in Stereo mode.
	Mono	Select for mono reception. Use to reduce noise during weak stereo broadcasts.
	✍ MTS is only available for analog programs.	
Alternate Audio *Digital channels only*	Select among the available options to switch among the alternate audio streams. The program you are tuned to may be broadcasted in a different language in the alternate audio streams.	
	✍ Alternate Audio is not available if the program is not broadcast with alternate audio streams.	
Speaker	On	Select to turn on the TV speakers.
	Off	Select to turn off the TV speakers and listen to the TV's sound only through your external audio receiver and speakers.

✍ You can also access Sound Mode, MTS and Alternate Audio by using the TOOLS button on the remote control.

Using the Screen Settings

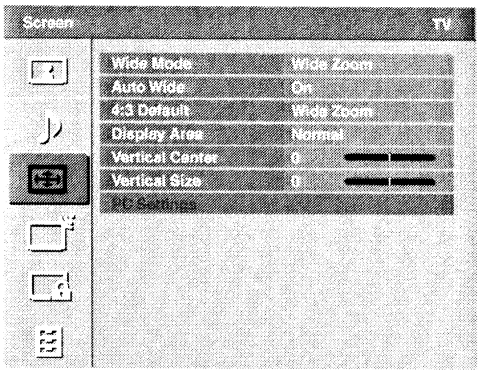

Option	Description	
Wide Mode	Wide Zoom	Fills the screen with minimum distortion.
	Normal	Select to display 4:3 picture in original size when the original source is 4:3.
	Full	Select to enlarge the picture horizontally to fill the screen when the original source is 4:3 (Standard definition source). When the original source is 16:9 (High-definition source), select this mode to display the 16:9 picture in its original size.
	Zoom	Select to enlarge the original picture without distorting the aspect ratio.
	✍ Normal is not available when you are watching a 720p, 1080i or 1080p source from a component video input, an HDMI input or a digital TV.	
Auto Wide	On	Select to have the screen automatically change to the screen mode that is best for the current program. If frequent screen changes are disturbing to you, select Off.
	Off	Select to turn off the Auto Wide option. Choose a screen mode from the Wide Mode option.
	✍ Auto Wide is not available when you are watching analog TV.	
4:3 Default *Select the default Screen Mode to use for 4:3 sources*	Wide Zoom	Enlarges the 4:3 picture to fill the 16:9 screen, displaying as much of the original image as possible.
	Normal	Select to display the 4:3 picture in its original size.
	Full	Select to enlarge the 4:3 picture horizontally only, to fill the display area.
	Zoom	Select to enlarge the picture horizontally and vertically to an equal aspect ratio that fills the wide screen.
	Off	Select to continue using the current Wide Mode setting when the channel or input is changed.
	✍ If 4:3 Default is set to anything but Off, the Wide Mode setting changes only for the current channel. When you change channels (or inputs), Wide Mode is automatically replaced with the 4:3 Default setting for 4:3 sources. To retain the current Wide Mode setting as channels and inputs are changed, set 4:3 Default to Off.	
Display Area	Full Pixel	Displays the picture for 1080i or 1080p sources in its original size.
	Normal	Displays the recommended picture area.
	-1/-2	Enlarges the picture to hide the edge of the picture.
Vertical Center	Allows you to move the position of the picture up and down. (Available only in Wide Zoom.)	
Vertical Size	Allows you to adjust the vertical size of the picture. (Available only in Wide Zoom.)	

Using the PC Settings

When a PC is connected to the TV and the PC input is selected, the PC Settings screen appears instead of the Screen settings.
Also you can select the PIP feature which allows you to view two pictures simultaneously from TOOLS button (see page 25).

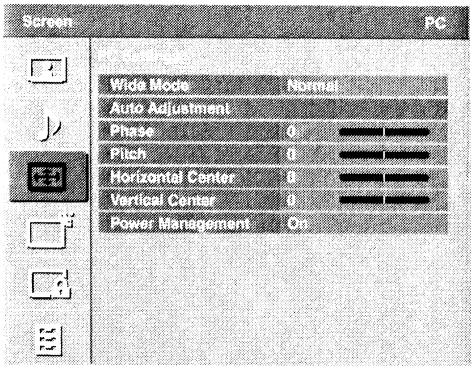

Option	Description	
Wide Mode	Normal	Select to display in the original image size.
	Full1	Select to enlarge the picture to fill the display area, keeping its original aspect ratio.
	Full2	Select to enlarge the picture to fill the display area.
Auto Adjustment	Select to automatically adjust the display position and phase of the picture when the TV receives an input signal from the connected PC. Note that Auto Adjustment may not work well with certain input signals. In such cases, manually adjust the options below.	
Phase	Adjust after Pitch to fine tune overall sharpness.	
Pitch	Adjust uneven sharpness on screen.	
	✍ For the PC Input Signal Reference Chart, see page 41.	
Horizontal Center	Allows you to move the position of the picture left and right.	
Vertical Center	Allows you to move the position of the picture up and down.	
Power Management	On	Select to automatically switch to the power saving mode when there is no signal input for 30 seconds.
	Off	Select to turn off Power Management.
	✍ Power Management is not VESA-compliant.	

Using the Channel Settings

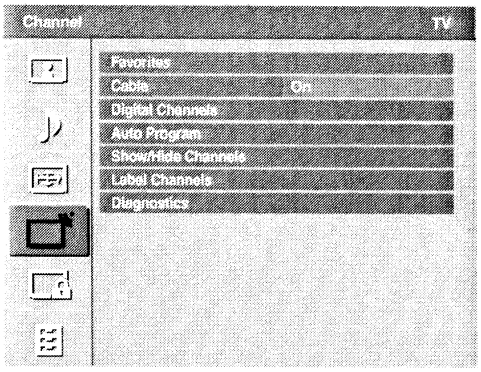

Option	Description
Favorites	Select favorite channels and external inputs (see page 23).
Cable	On — Select if you are receiving cable channels via Cable TV provider. Off — Select if you are using an antenna. ✍ You should run Auto Program after changing the Cable setting.
Digital Channels	Select to add digital channels.
Auto Program	Automatically sets up the channel list on the TV for all receivable channels. **1** Select Auto Program. **2** Select OK to start Auto Program. ✍ Running Auto Program will clear Favorites list.
Show/Hide Channels	Allows you to show or hide channels that appear when you use the CH +/– buttons. **1** Press ↑/↓ to scroll through the channels until you find the channel you want to show or hide. Then press ⊕ to select it. **2** Press ↑/↓ to determine if the channel will be shown or hidden. Then press ⊕ to select it. ✍ Channels that you set to be hidden can be accessed only with the 0-9 buttons. ✍ You can set channels to be hidden that are automatically set in Auto Program.
Label Channels	Allows you to assign labels (such as station call letters) to channel numbers. **1** Press ↑/↓ to scroll through the channel numbers. Then press ⊕ to select the channel number that you want to assign a label. **2** Press ↑/↓ to scroll through the label characters (A-Z, 0-9, etc.). Press → to move to the next character. Repeat to add up to 7 characters to the label. Press → to highlight OK and press ⊕ to set.
Diagnostics	Display diagnostics information about the TV. This can be useful in providing information to an authorized technician or repair person.

Using the Parental Lock Settings

The Parental Lock settings allows you to set up the TV to block programs according to their content and rating levels. Use 0-9 on the remote control to enter a four-digit password. The first time you create a password, confirm the password by entering it again.

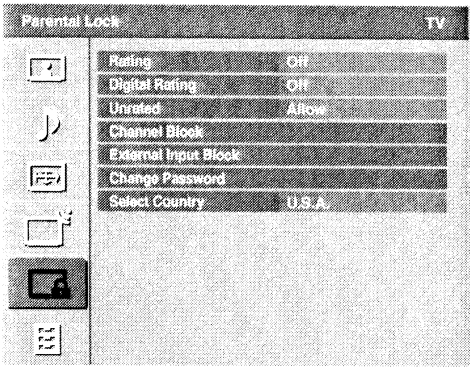

Option	Description	
Rating	Off	Turn Parental Lock off. No programs are blocked from viewing.
	Child	Maximum ratings permitted are: U.S.: TV-Y, TV-G, G Canada: C, G, TV-Y
	Youth	Maximum ratings permitted are: U.S.: TV-PG, PG Canada: C8+, PG, 8 ans+, TV-PG
	Young Adult	Maximum ratings permitted are: U.S.: TV-14, PG-13 Canada: 14+, 13 ans+, TV-14
	Custom	Select to set ratings manually. U.S.: See page 33 for details. Canada: See page 34 for details.
Digital Rating *(Available only in U.S.A. where advanced ratings exist)*	Off	Turn Parental Lock off. No programs that contain downloadable ratings are blocked from viewing.
	Custom	Select to block programs based on downloadable ratings.
	Clear All	Select to clear the entire downloadable rating system.
	✍ This action will delete the current Digital Rating menu and the menu will no longer be available until the TV is tuned to a channel that contains downloadable ratings.	
Unrated *(Available only when Country is set to U.S.A.)*	Allow	Allows programs and movies that are broadcasted without a rating.
	Block	Blocks all programs and movies that are broadcasted without a rating.
	✍ If you block unrated TV programs, be aware that the following types of programs may be blocked: programs broadcasted from another country, emergency broadcasts, political programs, sports, news, public service announcements, religious programs and weather.	
Channel Block	Allows you to block channels regardless of program ratings. To View a Blocked Channel Press ENT when tuned to the blocked channel then enter the password.	
External Input Block	Allows you to block external inputs regardless of program ratings. To View a Blocked External Input Press ENT when tuned to the blocked input then enter the password.	

Option	Description	
Change Password	Select to change your password.	
✍ You need your password for any future access into the Parental Lock settings. If you lose your password, see "Lost password." on page 38.		
Select Country	U.S.A.	Select to use U.S.A. ratings (see below).
	Canada	Select to use Canadian ratings (see page 34).

US Models: Selecting Custom Parental Lock Rating Options

To select custom rating options for the U.S., select U.S.A. in the Select Country setting (see above).

Option	Description	
Movie Rating	G	All children and general audience.
	PG	Parental guidance suggested.
	PG-13	Parental guidance for children under 13.
	R	Restricted viewing, parental guidance is suggested for children under 17.
	NC-17 and X	No one 17 or under allowed.
TV Rating	Age-Based Ratings	
Block programs by their rating, content or both	TV-Y	All children.
	TV-Y7	Directed to children age 7 and older.
	TV-G	General audience.
	TV-PG	Parental guidance suggested.
	TV-14	Parents strongly cautioned.
	TV-MA	Mature audience only.
	Content-Based Ratings	
	FV	Fantasy violence.
	D	Suggestive dialogue.
	L	Strong language.
	S	Sexual situations.
	V	Violence.
	✍ To ensure maximum blocking capability, set the Age-Based Ratings.	

(Continued)

Canadian Models: Selecting Custom Parental Lock Rating Options

To select custom rating options for Canada, select Canada in the Select Country setting (see page 33).

Option	Description	
English Rating	C	All children.
	C8+	Children 8 years and older.
	G	General programming.
	PG	Parental guidance.
	14+	Viewers 14 and older.
	18+	Adult programming.
French Rating	G	General programming.
	8 ans+	Not recommended for young children.
	13 ans+	Not recommended for ages under 13.
	16 ans+	Not recommended for ages under 16.
	18 ans+	Programming restricted to adults.
U.S.A. Rating	See "US Models" on page 33 for details.	

Viewing Blocked Programs

You can view blocked programs by entering the password. Press ENT when tuned to a blocked program, then enter the password. This temporarily turns the parental control feature off. To reactivate the Parental Lock settings, turn off the TV. When the TV is turned on again, your Parental Lock settings are reactivated.

Using the Setup Settings

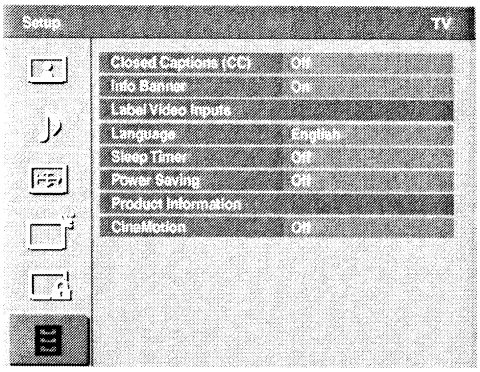

Option	Description
Closed Captions (CC)	Allows you to select from several closed caption modes (for programs that are broadcast with closed captioning).
	On — Closed Captions (CC) is turned on.
	Off — Closed Captions (CC) is turned off.
	Program — Allows you to set basic and advanced Closed Captions (CC) options. See "Programming Closed Captions (CC)" on page 36.
	✍ You can also access Closed Captions (CC) by using the CC button on the remote control when in analog TV, digital TV and external inputs (with the exception of PC input).
Info Banner	Set to On or Off. When on, displays the program description and the remaining time (if the broadcaster offers this service). Displays for a few seconds when the channel is changed or the DISPLAY button is pressed.
Label Video Inputs	Allows you to identify A/V equipment you connected to the TV, such as a VCR, DVD, etc. For example, if you have a DVD player connected to the COMPONENT IN jack, you can select the label DVD for the Component input. Then when you press INPUT to change inputs, the video label you assigned to that input appears on screen. **1** Press ↑/↓ to highlight the video input (Video 1-2, Component 1-2, HDMI 1-3, PC) to which you want to assign a label. Then press ⊕ to select the input. **2** Press ↑/↓ to highlight one of the displayed labels. Then press ⊕ to select the label. You can select from the following labels for each input: Video 1-2 — –, DVD, VCR, Blu-ray, Cable Box, Satellite, DVR, Game, Camcorder, Skip Component 1-2 — –, DVD, VCR, Blu-ray, Cable Box, Satellite, DVR, Game, Camcorder, Skip HDMI 1-3 — –, DVD, VCR, Blu-ray, Cable Box, Satellite, DVR, Game, Camcorder, Skip PC — –, Skip ✍ If you select Skip, your TV skips this input when you press the INPUT button. ✍ The Skip label is useful for inputs to which no equipment is connected.
Language	Select to display all on-screen settings in your language of choice: English, Español, Français.
Sleep Timer	Set the time in minutes (Off, 15, 30, 45, 60, 90, or 120) that you want the TV to remain on before shutting off automatically.

(Continued)

Option	Description
Power Saving	Select to reduce the power consumption by adjusting the backlight brightness. This also enhances the black level. Select from Off, Low and High. ✍ You can also access Power Saving by using the TOOLS button on the remote control.
Product Information	Select to display the equipment information of your TV.
CineMotion	Select Auto to automatically detect film content and apply a reverse 3-2 pulldown process. Moving pictures will appear cleaner and more natural looking. Select Off to disable the detection.

Programming Closed Captions (CC)

If you selected the Program option under Closed Captions (CC), you can change the following settings:

Option	Description		
Basic	Allows you to select basic analog (EIA-608) closed caption options.		
	CC1, CC2, CC3, CC4	Displays a printed version of the dialogue or sound effects of a program. (Should be set to CC1 for most programs.)	
	Text1, Text2, Text3, Text4	Displays network/station information presented using either half or the whole screen (if available).	
Digital CC	Allows you to set digital closed captioning to Basic (digital EIA-608) or Advanced (digital EIA-708).		
Advanced	Allows you to select advanced digital (EIA-708) closed caption options. Select from the available options.		
Advanced Settings	Allows you to make additional settings for digital (EIA-708) closed caption options. Select Text, and then select either As Broadcast or Custom.		
	Custom	Allows you to customize the following settings:	
		Character Style	Style 1-7
		Character Color	Color 1-8
		Character Size	Small, Standard, Large
		Character Opacity	Solid, Translucent, Transparent, Flashing
		Edge Color	Color 1-8
		Edge Type	None, Raised, Depressed, Uniform, Left Shadow, Right Shadow
		Background Color	Color 1-8
		Background Opacity	Solid, Translucent, Transparent, Flashing
		Window Color	Color 1-8
		Window Opacity	Solid, Translucent, Transparent, Flashing

Other Information

Troubleshooting

If you have additional questions, service needs, or required technical assistance related to the use of your Sony TV, please visit our website or call one of the following numbers:
<http://www.sony.com/TVsupport>
1-800-222-SONY(7669) for US Residents
1-877-899-SONY(7669) for Canadian Residents

Problem	Possible Remedies
No picture.	
Cannot receive any channels.	❑ Make sure the power cord is connected securely. ❑ Turn on the power of the TV. ❑ Check antenna/cable connections.
TV is locked to one channel.	❑ Perform Auto Program to add receivable channels that are not presently in the TV's memory (page 31).
Cannot receive or select channels.	❑ Perform Auto Program to add receivable channels that are not presently in the TV's memory (page 31). ❑ To receive or select cable channels, make sure that Cable in the Channel settings is set to On (page 31). To receive or select UHF channels over an antenna, make sure Cable is set to Off.
The TV turns off automatically.	❑ Check Power Management in the PC Settings. (page 30)
No picture from some video sources.	❑ Check the connection between the optional video equipment and the TV. ❑ Press INPUT on the remote control (page 25). ❑ Press MENU on the remote control. Select your desired input from the external inputs list.
Poor picture.	
Double images or ghosts.	❑ Check antenna/cable connections. ❑ Check the antenna location and direction.
Only snow and noise appear on the screen.	❑ Check if the antenna is broken or bent. ❑ Check if the antenna has reached the end of its serviceable life. (3-5 years in normal use, 1-2 years at the seaside.)
Dotted lines or stripes.	❑ Keep the TV away from noise sources such as cars, motorcycles, or hair-dryers. ❑ If using 300 ohm twin lead, move the excess lead away from the TV or try using 75 ohm coaxial cable instead.
No color/Dark picture/Color is not correct/The picture is too bright.	❑ Press PICTURE to select the desired picture mode (page 23). ❑ Adjust the Picture Mode options in the Picture settings (page 27). ❑ If you set the Power Saving mode to Low or High, it will enhance the black level.
Noisy picture.	❑ Make sure that the antenna is connected using the 75-ohm coaxial cable (not supplied). ❑ Keep the antenna cable away from other connecting cords. ❑ To avoid TV interference, make sure to use an undamaged antenna cable.

(Continued)

Problem	*Possible Remedies*
No sound/Noisy sound	
Good picture, no sound.	❑ Check the volume control. ❑ Press MUTING or VOL + so that "Muting" disappears from the screen (page 23). ❑ Set Speaker to On in the Sound settings (page 28). If it is set to Off, sound is not output from the TV's speakers regardless of the TV's volume control.
Audio noise.	❑ Make sure that the antenna is connected using the 75-ohm coaxial cable (not supplied). ❑ Keep the antenna cable away from other connecting cords. ❑ To avoid TV interference, make sure to use an undamaged antenna cable.
Wide Mode changes automatically.	❑ The current Wide Mode setting is automatically replaced with the 4:3 Default setting when you change the channel or video input, if 4:3 Default in the Screen settings is set to anything but Off. If you want to lock in the Wide Mode selected with the WIDE button, set 4:3 Default to Off in the Screen settings (page 29). ❑ Check the Auto Wide option in the Screen settings (page 29).
"Black box" on screen.	❑ You have selected a text option in the Setup setting and no text is available. (See pages 35 and 36 to reset Setup selections.) To turn off this feature, set the Closed Captions (CC) option to Off. If you were trying to select closed captioning, select CC1 instead of Text1-4.
Black bands appear at the top and bottom of the screen.	❑ Some wide screen programs are filmed in aspect ratios that are greater than 16:9 (this is especially common with theatrical releases). Your TV will show these programs with black bands at the top and bottom of the screen. For more details, check the documentation that came with your DVD (or contact your program provider).
Certain programs on DVD or other digital sources display a loss of detail, especially during fast-motion or dark scenes.	❑ The compression used by certain digital broadcasts and DVDs may cause your TV's screen to display less detail than usual, or cause artifacts (small blocks or dots, pixelations) to appear on your screen. This is due to your TV's large screen and ability to show very fine detail, and is normal for certain digitally recorded programs.
Remote control does not operate.	❑ Check the polarity of the batteries or replace the batteries. ❑ Point the remote control at the remote control sensor of the TV. ❑ Fluorescent lamps can interfere with your remote control operation; try turning off the fluorescent lamps. ❑ Keep the remote control sensor area clear from obstacles.
Some digital cable channels are not being displayed.	❑ Certain cable companies have limitations on the broadcast of digital cable channels. Check with your cable company for more information. ❑ The digital cable channel may be set to Hidden in the Show/Hide Channels setting (see page 31).
Lost password.	❑ Select the Parental Lock settings on the settings screen, then enter the following master password: 4357. The master password clears your previous password and allows you to enter a new password (page 33).
How to reset the TV to factory settings.	❑ Turn on the TV. While holding down the ▲ button on the remote control, press the POWER button on the TV. (The TV will turn itself off, then back on again.) Release the ▲ button. WARNING: The Reset will clear all of your customized settings including Parental Lock setting.

Preparation for Wall Mounting

This TV can be installed on a wall by using a Wall-Mount Bracket (sold separately). Before mounting the TV on a wall, the Table-Top Stand must be removed from the TV.

✍ Do not remove the Table-Top Stand for any reason other than to wall-mount the TV.

Follow the simple steps below to remove the Table-Top Stand:

Sony Wall-Mount Bracket Model SU-WL500

1. Disconnect all the cables from the TV.
2. Secure the Mounting Hook to the rear of the TV.
3. Adjust the angle of the Mounting Hook.
4. Start removing the screws behind the TV (See illustration below). Do not remove any other screws from the TV.
5. When screws are removed, lift the TV off the stand. Make sure that you carry out this task with at least two people. Do not attempt to lift the TV by yourself.

For bracket installation, refer to the instruction guide provided by the Wall-Mount Bracket model for your TV. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight. **For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV and the wall-mounting of your TV should be performed by Sony dealers or licensed contractors.**

Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the mounting hooks to the TV set. The supplied screws are designed so that they are 8 mm to 12 mm in length when measured from the attaching surface of the mounting hook. The diameter and length of the screws differ depending on the Wall-Mount Bracket model. Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

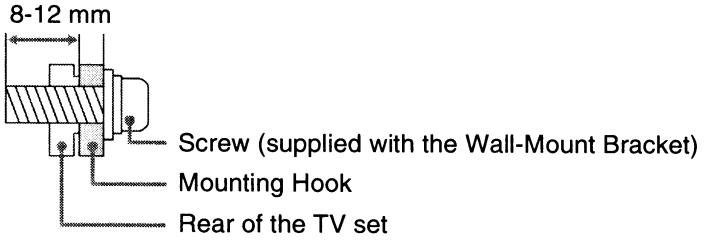

(Continued)

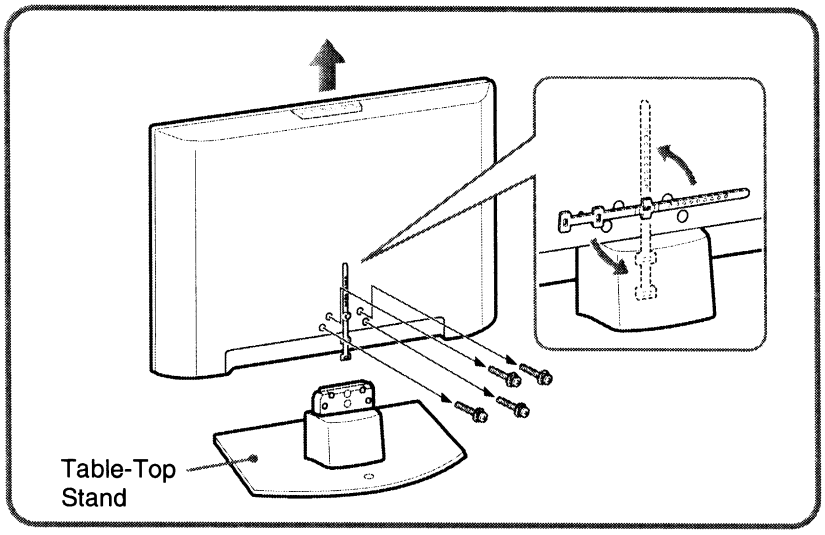

Be sure to store the removed screws and Table-Top Stand in a safe place until you are ready to reattach the Table-Top Stand. Keep the screws away from small children.

PC Input Signal Reference Chart

After connecting the PC to the TV, set the output signal from the PC according to the chart below.

Resolution / Signals	Horizontal (Pixel)	×	Vertical (Line)	Horizontal frequency (kHz)	Vertical frequency (Hz)	Standard
VGA	**640**	×	**480**	**31.5**	**60**	**VGA**
	640	×	480	37.5	75	VESA
	720	×	400	31.5	70	VGA-T
SVGA	**800**	×	**600**	**37.9**	**60**	**VESA Guidelines**
	800	×	600	46.9	75	VESA
XGA	**1024**	×	**768**	**48.4**	**60**	**VESA Guidelines**
	1024	×	768	56.5	70	VESA
	1024	×	768	60.0	75	VESA
WXGA	**1280**	×	**768**	**47.4**	**60**	**VESA**
	1280	×	**768**	**47.8**	**60**	**VESA**
	1280	×	768	60.3	75	
	1360	×	**768**	**47.7**	**60**	**VESA**
SXGA	**1280**	×	**1024**	**64.0**	**60**	**VESA**
	1280	×	1024	80.0	75	VESA
HDTV	**1920**	×	**1080**	**67.5**	**60**	**CEA-861***

✍ This TV's PC input does not support Sync on Green or Composite Sync.

✍ This TV's PC VGA input does not support interlaced signals.

✍ Your PC must support one of the above PC input signals to display on the television.

✍ For the best picture quality, it is recommended to use the signals (boldfaced) in the above chart with a 60 Hz vertical frequency. In plug and play, signals with a 60Hz vertical frequency will be detected automatically. (PC reboot may be necessary.)

* The 1080p timing when applied to the HDMI input will be treated as a video timing and not PC timing. This affects Picture settings, Wide Mode settings, and PIP function. To view PC content set Picture Mode to Custom, Wide Mode to Full, and Display Area to Full Pixel.

Specifications

Television system:

NTSC	American TV standard
ATSC (8VSB terrestrial)	ATSC compliant 8VSB
QAM on cable	ANSI/SCTE 07 2000 (Does not include CableCARD functionality)

Channel coverage:	Analog	Digital
Terrestrial	2-69	2-69
Cable	1-135	1-135

Antenna: 75-ohm external terminal for VHF/UHF

Panel System:
LCD (Liquid Crystal Display) Panel

Display resolution (horizontal × vertical):
1,920 dots × 1,080 lines

VIDEO IN 1/2:
S VIDEO (4-pin mini DIN) (VIDEO 1 only):
Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative
C: 0.286 Vp-p (Burst signal), 75 ohms
VIDEO: 1 Vp-p, 75 ohms unbalanced, sync negative
AUDIO: 500 mVrms (100% modulation)
Impedance: 47 kilohms

COMPONENT IN 1/2:
YPBPR (Component Video):
Y: 1.0 Vp-p, 75 ohms unbalanced, sync negative
PB: 0.7 Vp-p, 75 ohms
PR: 0.7 Vp-p, 75 ohms
Signal format: 480i, 480p, 720p, 1080i, 1080p
AUDIO: 500 mVrms (100% modulation)
Impedance: 47 kilohms

HDMI IN 1/2/3:
HDMI: Video: 480i, 480p, 720p, 1080i, 1080p, 1080/24p
Audio: Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bits
AUDIO (HDMI IN 1 only):
500 mVrms (100% modulation)
Impedance: 47 kilohms

AUDIO OUT:
500 mVrms (100% modulation)
More than 500 mVrms (Fixed)

DIGITAL AUDIO OUT (OPTICAL):
Optical Digital Audio Output (PCM/Dolby Digital)

PC IN:
Analog RGB (D-sub 15-pin):
0.7 Vp-p, 75 ohms, positive
See the PC Input Signal Reference Chart on page 41
AUDIO (Stereo mini jack):
500 mVrms
Impedance: 47 kilohms

Power Requirement:
120 V-240 V AC, 50/60 Hz

Screen size (in inches):
40, 46

Speaker/Full range (2):

KDL-40S4100:	
(in mm)	57.5 × 126
(in inches)	$2\ ^{3}/_{8} \times 5$
KDL-46S4100:	
(in mm)	65 × 147
(in inches)	$2\ ^{5}/_{8} \times 5\ ^{7}/_{8}$

Speaker output:
10 W + 10 W

Power consumption:
KDL-40S4100:
in use 210 W
in standby less than 1.0 W
KDL-46S4100:
in use 260 W
in standby less than 1.0 W

Dimensions:

KDL-40S4100	
with stand:	
(in mm)	997 × 689 × 276
(in inches)	$39\ ^{3}/_{8} \times 27\ ^{1}/_{4} \times 10\ ^{7}/_{8}$
without stand:	
(in mm)	997 × 652 × 111
(in inches)	$39\ ^{3}/_{8} \times 25\ ^{3}/_{4} \times 4\ ^{3}/_{8}$
KDL-46S4100	
with stand:	
(in mm)	1130 × 784 × 308
(in inches)	$44\ ^{1}/_{2} \times 30\ ^{7}/_{8} \times 12\ ^{1}/_{4}$
without stand:	
(in mm)	1130 × 746 × 115
(in inches)	$44\ ^{1}/_{2} \times 29\ ^{3}/_{8} \times 4\ ^{5}/_{8}$

Mass:

KDL-40S4100	
with stand:	
(in kg.)	22.7
(in lb.)	50 lb 1 oz
without stand:	
(in kg.)	19.9
(in lb.)	43 lb 14 oz
KDL-46S4100	
with stand:	
(in kg.)	30.0
(in lb.)	66 lb 3 oz
without stand:	
(in kg.)	26.5
(in lb.)	58 lb 7 oz

Supplied accessories:
Remote control RM-YD025 (1)
Size AA batteries (2)
AC power cord (1)
Table-Top Stand (1)
Screws (4)
Cable band (1)
Operating Instructions (1)
Quick Setup Guide (1)
Warranty Card (1)
Online Registration Card (1)
Open-source software flyer (1)

Optional accessories:
Connecting cables
Support belt kit
Wall-Mount Bracket: SU-WL500
TV-Stand: KDL-40S4100: WS-S10LS/SU-FL300M
KDL-46S4100: WS-S10LS/SU-FL300M/SU-FL300L

Optional accessories availability depends on its stock.

Design and specifications are subject to change without notice.

Index

0-9 buttons 25
4:3 Default 29

A

AC IN 18
Advanced 36
Advanced Settings 36
Alternate Audio 28
AUDIO OUT jack, described 18
Auto Adjustment 30
Auto Program 22, 31
Auto Wide 29

B

Backlight 27
Balance 28
Basic 36
Bass 28
Brightness 27

C

Cable 31
CABLE/ANTENNA input, described 18
CC button 23
CH+/– button 25, 26
Change Password 33
Channel Block 32
Channels
  Creating labels 35
  Setting up 22
CineMotion 36
Closed caption modes 36
Closed Captions (CC) 35
Color 27
Color Temp 27
COMPONENT IN
  (1080p/1080i/720p/480p/480i) 18

D

Diagnostics 31
Digital CC 36
Digital Channels 31
DIGITAL OUT OPTICAL 18
Digital Rating 32
Display Area 29
DISPLAY button 23

E

English Rating 34
ENT button 25
External Input Block 32

F

Favorites 31
FAVORITES button 23
French Rating 34

H

HDMI IN jack, described 17
Horizontal Center 30
Hue 27

I

Info Banner 35
Infrared Receiver (IR) 26
INPUT button 25, 26
Installing the TV on a wall 39

J

JUMP button 25

L

Label Channels 31
Label Video Inputs 35
Language 35

M

MENU button 23, 26
Movie Rating 33
MTS 28
MUTING button 23

N

Noise Reduction 27

P

PC IN 18
Phase 30
Picture 27
PICTURE button 23
Picture Mode 27
Pitch 30
POWER button 24, 26
POWER LED 26
Power Management 30
Power Saving 36
Product Information 36

R

Rating 32
Reset 27, 28, 38
RETURN button 23

S

S VIDEO jack, described 18
Select Country 33
Settings
  Channel 31
  Parental Lock 32
  PC Settings 30
  Picture 27
  Screen 29
  Setup 35
  Sound 28
Sharpness 27
Show/Hide Channels 31
SLEEP button 23
Sleep Timer 35
Sound Mode 28
Speaker 28
STANDBY LED 26

T

TIMER LED 26
TOOLS button 25
Treble 28
Troubleshooting 37, 38
TV Rating 33

U

U.S.A. Rating 34
Unrated 32

V

Vertical Center 29, 30
Vertical Size 29
VIDEO/AUDIO (L/R) jacks, described
  17, 18
Viewing Blocked Programs 34
VOL+/– button 23, 26

W

WIDE button 24
Wide Mode 29, 30

For Your Convenience

Please contact Sony directly if you:

- Have questions on the use of your television after reading your Operating Instruction manual and Quick Setup Guide
- Experience difficulty operating your television

Contact Sony Customer Support at:

http://www.sony.com/tvsupport

or to speak with a support representative:

United States
1-800-222-SONY (7669)

Canada
1-877-899-SONY (7669)

Sony will work to resolve your questions more quickly than your retailer or place of purchase.

Please Do Not Return the Product to the Store

http://www.sony.net/

Printed in Mexico

46.71H16.001

3-870-416-12(1)

46.71H19.001

SONY

KDL-40S4100
KDL-46S4100

Quick Setup Guide

For further information, see the Operating Instruction Manual supplied with the TV. Please retain this guide for your future reference.

Upgrade your signal to high-definition programming to view the same picture quality at home as you've seen in the store. Contact your cable or satellite provider for upgrading to high-definition TV for stunning detail and richer sound.

For Your Convenience

Please contact Sony directly if you have questions on the use of your television after reading your Quick Setup Guide and Operating Instruction Manual.

Contact Sony Customer Support at:

http://www.sony.com/tvsupport

Or to speak with a support representative:

United States	**Canada**
1-800-222-SONY (7669)	1-877-899-SONY (7669)

Please Do Not Return the Product to the Store

©2008 Sony Corporation Printed in Mexico

Making Audio/Video Connections

Your new TV includes various types of video inputs and two types of audio jacks; RCA type and digital audio (optical). Use the outputs/inputs that are available on your components that provide the best audio/video performances:

Connector type	Best Audio/Video Performance	Connector type
Digital Audio Out (Optical)	↑	HDMI (High-Definition Multimedia Interface)
Analog Audio		Component video
		S VIDEO
		Composite video

The connection diagrams shown below and on the reverse side are recommendations only; other possible solutions may exist. Connections that include an AV receiver can often be complex, so check your AV receiver's instruction manual for additional details.

See the "Cables Required" chart that appears with the diagram to determine which cables you'll need. Depending on the components you plan to connect, you may need to purchase extra cables.

If your connecting equipment has DVI output instead of the HDMI output, you must use DVI-to-HDMI cable or a DVI to HDMI adapter for the video and also connect an audio cable for the sound.

Running Initial Setup

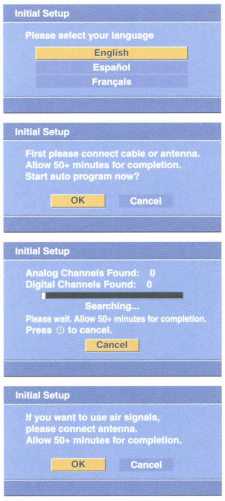

1 Select the language for the OSD (on screen display).

2 Connect either cable or antenna to your TV (you can connect both using an A-B RF switch). If you connect cable, the TV will scan cable channels. After this scanning, you can search antenna channels as well.

If you have cable and antenna connection available, please connect cable first.

If you are not using the CABLE/ANTENNA connection to TV, you can cancel the **Auto Program** by selecting **Cancel**.

3 Your TV will detect the type of signal connected and will start scanning for the channels.

4 If the **Initial Setup** programming found cable channels, you will be able to scan antenna channels as well. Connect the antenna (using an A-B RF switch, not supplied) and change the switch to antenna, then start **Auto Program** to search antenna channels.

A HD Basic Connection

Cables Required	
Splitter	1
Coaxial	4
HDMI	2

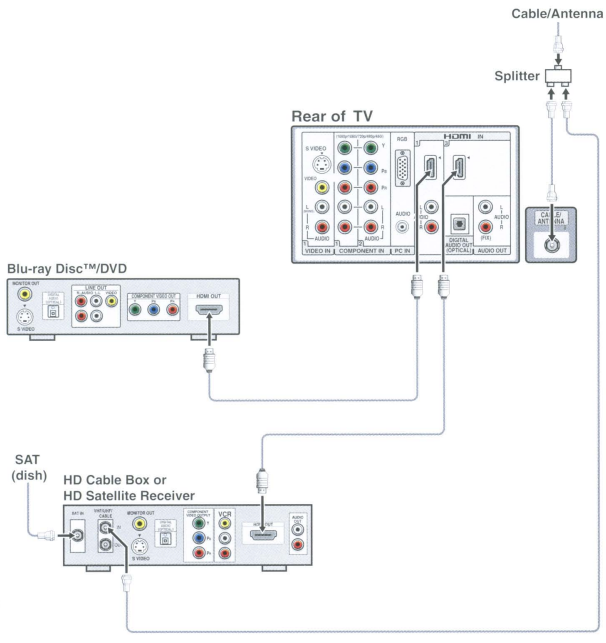

B HD Basic Connection with A/V Receiver

Cables Required	
Splitter	1
Coaxial	4
HDMI	2
Optical Audio	3

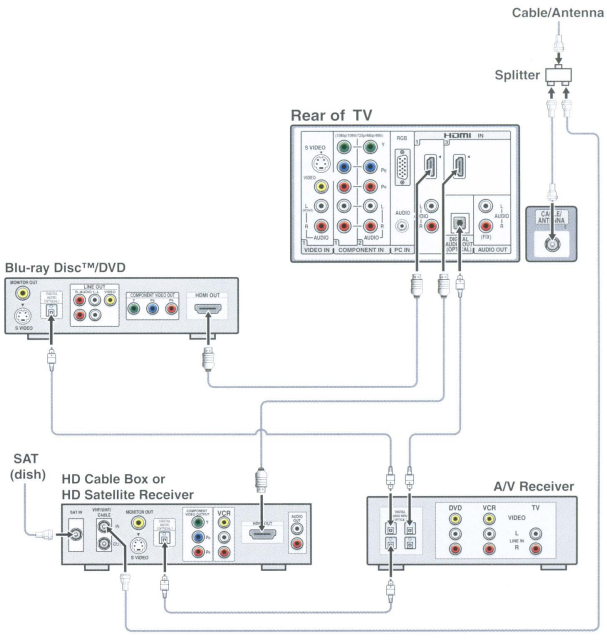

Continued ➡

C

HD Basic Connection with Home Theater System

Cables Required	
Coaxial	2
Composite	1
Optical Audio	1
HDMI	2

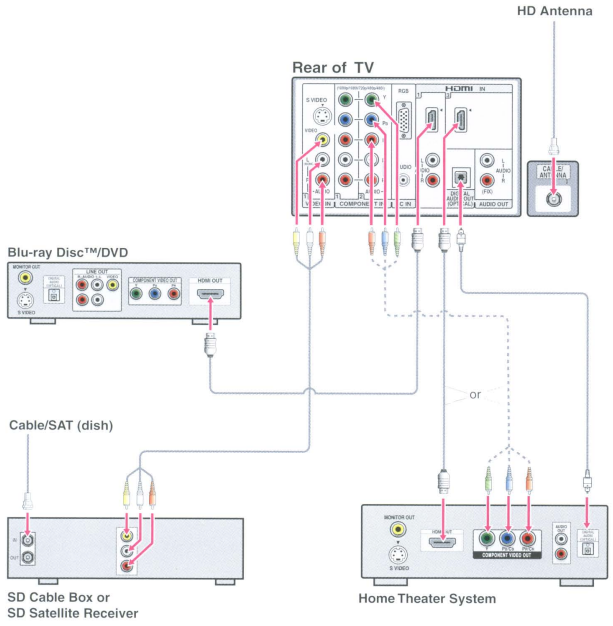

D

Basic Connection with SD VCR/DVD

Cables Required	
Splitter	1
Coaxial	3
Composite	1
Component	1
Audio	1

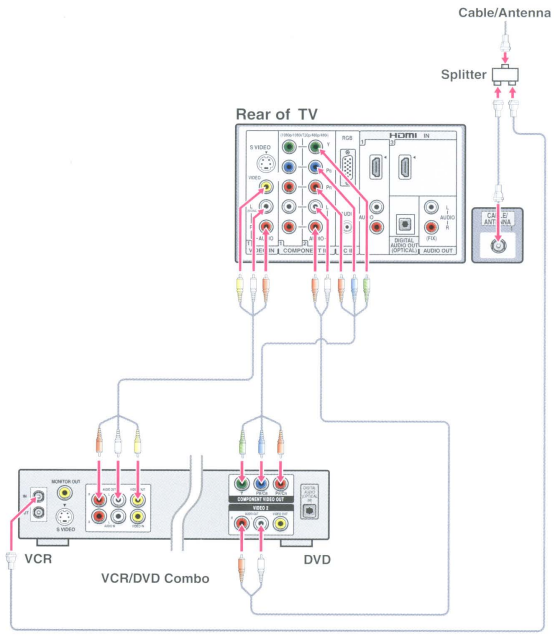

E

Notebook PC Connection

Cables Required	
Splitter	1
Coaxial	4
HD15-HD15	1
Audio	1
HDMI	1

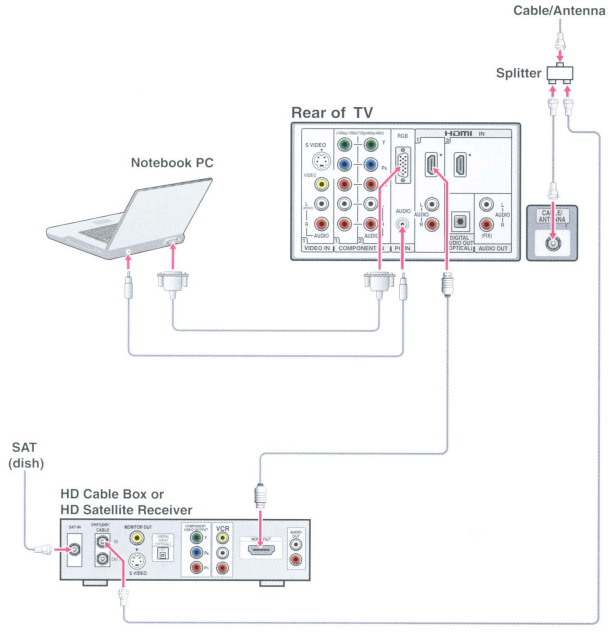

F

Desktop PC Connection

Cables Required	
Splitter	1
Coaxial	4
DVI-to-HDMI	1
Audio	1
HDMI	1

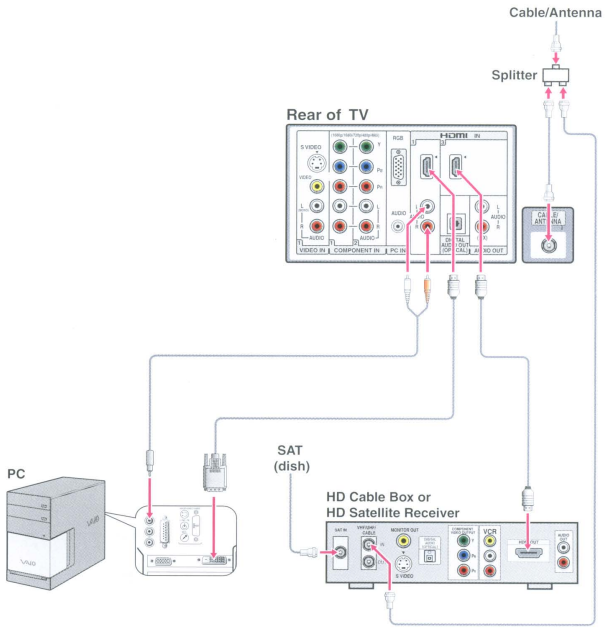

Assembling the Table-Top Stand/ Installation du support de table/ Montaje del soporte de sobremesa

1

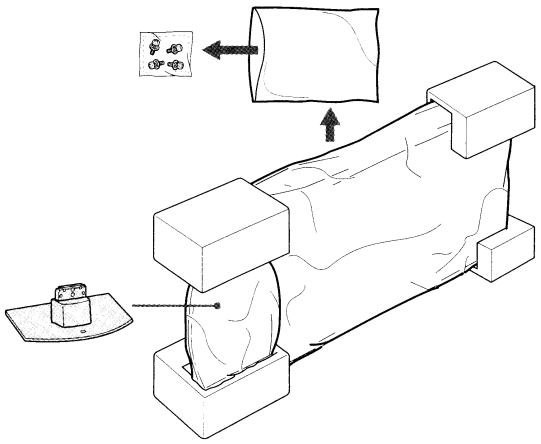

Note/ Remarque/ Nota

Put your hands into the package when taking out the TV from the carton./
Lorsque vous retirez le téléviseur de l'emballage, mettez les mains dans la boîte./
Introduzca sus manos dentro del paquete cuando retire el televisor de la caja.

2

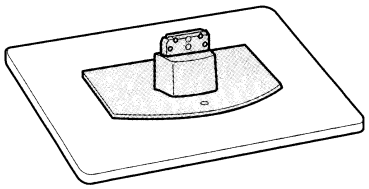

3

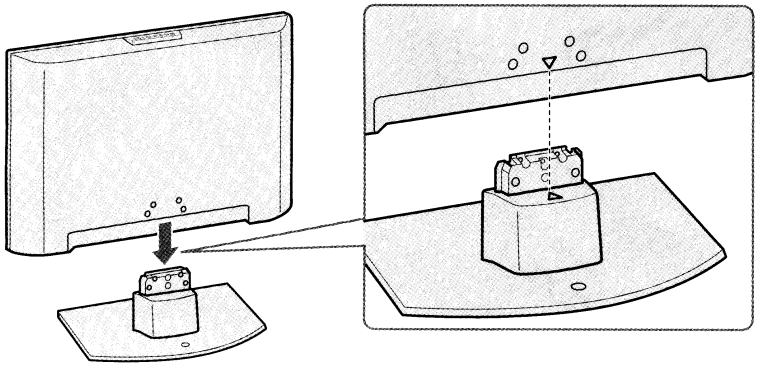

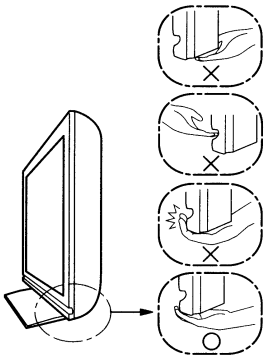

4

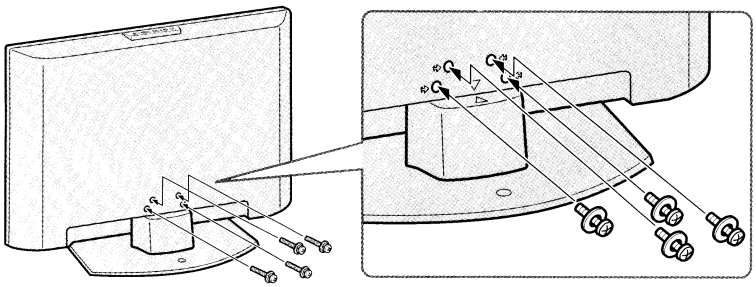



1.5 N·m {15 kgf·cm}

© 2008 Sony Corporation
Printed in Mexico
46.71H08.001
3-870-417-**11**(1)

SONY

KDL-40S4100
KDL-46S4100

English *Installing the Wall-Mount Bracket/Installing the TV Stand*

To Customers

For product protection and safety reasons, Sony strongly recommends that installing of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

Your KDL-40S4100/KDL-46S4100 can be installed using the SU-WL500 Wall-Mount Bracket or SU-FL300M, SU-FL300L (except for KDL-40S4100) TV Stand (sold separately). Please provide your licensed contractor with this installation supplement as well as the Instructions (supplied with the SU-WL500 Wall-Mount Bracket or SU-FL300M, SU-FL300L TV Stand). Read these documents carefully for safety and proper installation.
If you install the SU-FL300M, SU-FL300L TV Stand, please use the paper template in red print supplied with the TV Stand.

To Sony Dealers and Contractors

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Français *Installation du support de fixation murale/Installation du support TV*

À l'attention des clients

Par souci de protection du produit et pour des raisons de sécurité, Sony recommande vivement que l'installation du support de fixation murale du téléviseur soit confiée à un revendeur Sony ou à un installateur agréé. Ne pas tenter d'effectuer l'installation soi-même.

Le KDL-40S4100/KDL-46S4100 peut être installé à l'aide du support de fixation murale SU-WL500 ou du support TV SU-FL300M, SU-FL300L (sauf pour le KDL-40S4100) (vendu séparément). Veuillez fournir à l'installateur agréé ce supplément ainsi que le mode d'emploi (accompagnant le support de fixation murale SU-WL500 ou le support TV SU-FL300M, SU-FL300L). Lire attentivement ces documents qui concernent la sécurité et l'installation correcte du support.
Si vous installez le support TV SU-FL300M, SU-FL300L, veuillez utiliser le gabarit de papier en rouge fourni avec le support TV.

À l'intention des revendeurs Sony et des installateurs

Accorder une attention particulière à la sécurité lors de l'installation, de l'entretien périodique et de la vérification de ce produit.

Español *Instalación del soporte de montaje mural/Instalación del soporte para TV*

Para los clientes

Por razones de protección del producto y de seguridad, Sony recomienda insistentemente que la instalación del soporte de montaje mural del televisor sea realizado por un distribuidor o contratista autorizado de Sony. No intente instalarlo usted mismo.

El modelo KDL-40S4100/KDL-46S4100 puede instalarse con el soporte de montaje mural SU-WL500 o el soporte para TV SU-FL300M o SU-FL300L (excepto para el modelo KDL-40S4100) (se vende por separado). Proporcione al contratista autorizado este suplemento para la instalación, así como las instrucciones (suministradas con el soporte de montaje mural SU-WL500 o con el soporte para TV SU-FL300M o SU-FL300L). Lea atentamente estos documentos para realizar la instalación correctamente y de manera segura.
Si instala el soporte para TV SU-FL300M o SU-FL300L, utilice la plantilla de papel impresa en rojo incluida con el soporte para TV.

Para distribuidores y contratistas de Sony

Ponga especial atención a la seguridad durante la instalación, mantenimiento periódico y comprobación de este producto.

© 2008 Sony Corporation Printed in Mexico

46.71H04.001

3-870-415-**11**(1)

English

Installing the TV on a wall

The TV can be installed on a wall by attaching a Wall-Mount Bracket (sold separately).
Verify your TV's model number and be sure to use the bracket specified for your model only. Refer to the Steps on this leaflet along with the Instructions supplied with the SU-WL500 Wall-Mount Bracket, to properly carry out the installation.

For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV and that the wall-mounting of your TV is performed by Sony dealers or licensed contractors.

Sufficient expertise is required in installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.

Step 1: Checking the parts required for the installation

Open the Wall-Mount Bracket package and check the contents for all required parts along with the Instructions.

Step 2: Deciding on the installation location

Decide where you want to install your TV. Refer to the reverse page for the TV installation dimensions table.
Refer to the Instructions for SU-WL500.

Step 3: Installing the Base Bracket on the wall

Refer to the Instructions for SU-WL500.

Step 4: Preparing for the installation of the TV

Disconnect all the cables from the TV.

1 Secure the Mounting Hook to the rear of the TV.

Referring to the Screw and Hook locations diagram/table on the reverse page, determine the screw positions, and secure the Mounting Hook to the rear of the TV.

❶ Secure the Mounting Hook to the rear of the TV temporarily, using the supplied four screws (+PSW6 × 16).
❷ Be sure that both screws are securely tightened with equal torque strength to the rear of the TV.

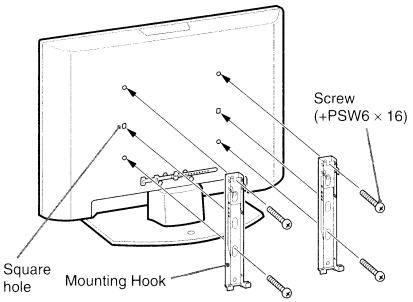

Align the tab on the rear of the Mounting Hook with the square hole on the rear of the TV as in the illustration below.

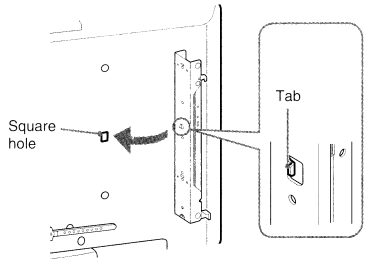

Notes

- Be sure not to use any screws other than the supplied ones (+PSW6 × 16) when securing the Mounting Hook.
- If an electric screwdriver is used, set the torque to tighten at approximately 2.0 N·m {20 kgf·cm}.

2 Adjust the angle of the Mounting Hook using the hexagon wrench supplied with the Wall-Mount Bracket.

When installing the TV parallel to the wall (0 degrees), adjustment of the Mounting Hook angle (procedures ❶ and ❷ below) is not necessary. Make sure that each arm base Ⓧ is screwed in securely.

❶ Remove the two screws from the arm base Ⓧ of the Mounting Hook. Choose the holes corresponding to the desired angle (5, 10, 15 or 20 degrees).
❷ Adjust the angles of the top Ⓨ and bottom Ⓩ arm to fit the corresponding hole, and firmly secure each arm using the two screws removed in the previous procedure ❶.

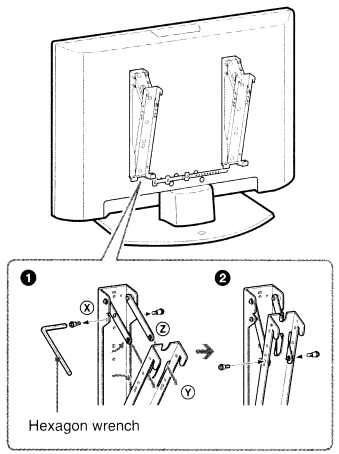

Notes

- Be sure to adjust the right and left arms to the same angle.
- Make sure that the two arm bases are screwed in securely.

CAUTION

Be careful not to pinch your fingers when adjusting the angle of the Mounting Hook.

3 Remove the screws from the rear of the TV. Then detach the Table-Top Stand from the TV.

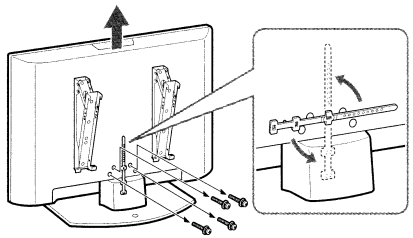

CAUTION

Make sure that you carry out this task with two or more people.

Step 5: Installing the TV on the wall

Refer to the instructions for SU-WL500.

Notes

- When you put the TV back on the stand, reverse the above steps (insert the posts of the stand, aligning with the lines on the rear of the TV).
- When moving the TV, do not squeeze the bottom of the front panel too strongly.
- Remove the screws or install the Mounting Hook on a stable and level surface.

Français

Fixation du téléviseur au mur

Le téléviseur peut être fixé au mur à l'aide du support de fixation mural (vendu séparément).
Vérifier la référence du modèle du téléviseur et s'assurer à utiliser uniquement le support spécifié pour ce modèle. Consulter les étapes de ce dépliant ainsi que le mode d'emploi accompagnant le support de fixation mural SU-WL500 pour effectuer correctement l'installation.

Pour des raisons de sécurité et de protection du téléviseur, Sony recommande fortement que vous utilisiez le modèle de support de fixation murale conçu pour votre appareil, et que l'installation soit effectuée par un détaillant Sony ou un représentant agréé.

Une certaine expertise est requise pour installer ce produit, notamment pour déterminer la résistance du mur par rapport au poids du téléviseur. S'assurer de confier la fixation de ce produit au mur à des revendeurs Sony ou à des installateurs agréés et d'être particulièrement vigilant en matière de sécurité au cours de l'installation. Sony ne peut être tenu responsable de tout dommage ou blessure résultant d'une manipulation ou d'une installation incorrecte.

Étape 1 :Vérification des pièces requises pour l'installation

Ouvrez l'emballage du support de fixation murale et vérifiez que toutes les pièces nécessaires sont présentes ainsi que le mode d'emploi.

Étape 2 :Choix de l'emplacement d'installation

Décidez de l'emplacement où vous voulez installer votre téléviseur. Voir le verso de la page pour consulter le tableau des dimensions d'installation des téléviseurs.
Reportez-vous au mode d'emploi du SU-WL500.

Étape 3 : Installation au mur du support de fixation de la base

Reportez-vous au mode d'emploi du SU-WL500.

Étape 4 :Préparation de l'installation du téléviseur

Débranchez tous les câbles du téléviseur.

1 Fixez le crochet de fixation à l'arrière du téléviseur.

En vous reportant au schéma/tableau des emplacements des crochets et des vis au verso de la page, déterminez les emplacements des vis et fixez le crochet de fixation à l'arrière du téléviseur.

❶ Fixez temporairement le crochet de fixation à l'arrière du téléviseur à l'aide des quatre vis fournies (+PSW6 × 16).
❷ Assurez-vous que les deux vis sont serrées convenablement, au même couple, à l'arrière du téléviseur.

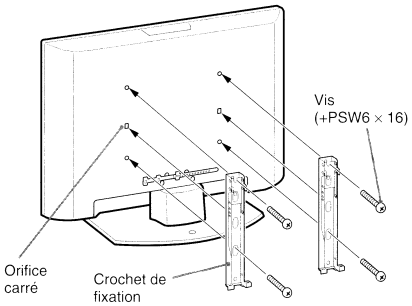

Alignez la patte située à l'arrière du crochet de fixation sur l'orifice carré au dos du téléviseur, de la manière illustrée ci-dessous.

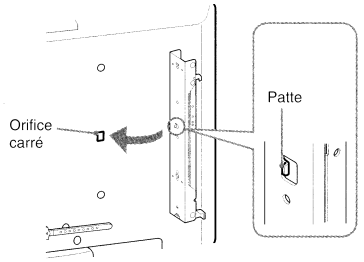

Remarques

- Veillez à utiliser exclusivement les vis fournies (+PSW6 × 16) pour fixer le crochet de fixation.
- Si vous utilisez un tournevis électrique, ajustez l'effort de serrage à environ 2,0 N·m {20 kgf·cm}.

2 Réglez l'angle du crochet de fixation à l'aide de la clé hexagonale fournie avec le support de fixation murale.

Si vous installez le téléviseur parallèlement au mur (0 degré), il n'est pas nécessaire de régler l'angle du crochet de fixation (procédures ❶ et ❷ ci-dessous). Vérifiez que chaque base de bras Ⓧ est vissée solidement.

❶ Retirez les deux vis de la base du bras Ⓧ du crochet de fixation. Choisissez les trous correspondant à l'angle souhaité (5, 10, 15 ou 20 degrés).
❷ Réglez les angles du bras supérieur Ⓨ et du bras inférieur Ⓩ en fonction du trou correspondant, puis fixez convenablement chaque bras à l'aide des deux vis retirées au cours de la procédure précédente ❶.

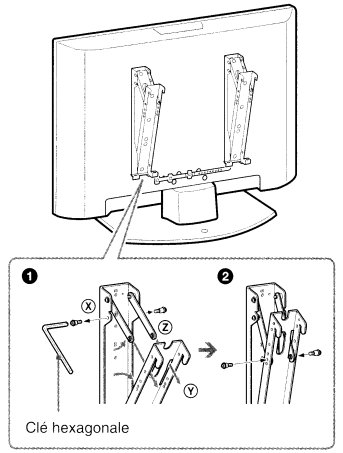

Remarques

- Veillez à régler les bras droit et gauche au même angle.
- Vérifiez que les deux bases des bras sont vissées solidement.

ATTENTION

Veillez à ne pas vous pincer les doigts lorsque vous réglez l'angle du crochet de fixation.

3 Retirez les vis situées à l'arriére du téléviseur. Ensuite, détachez le support de table du téléviseur.

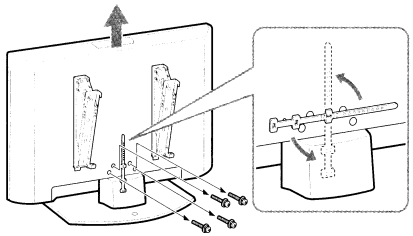

ATTENTION

Pour exécuter cette tâche, vous devez prévoir deux personnes au moins.

Étape 5 : Installation du téléviseur sur le mur

Reportez-vous au mode d'emploi du SU-WL500.

Remarques

- Lorsque vous remettez le téléviseur sur le support, exécutez les étapes ci-dessus dans l'ordre inverse (insérez les piliers dans le support, en les alignant avec les lignes qui se trouvent à l'arrière du téléviseur).
- Lorsque vous déplacez le téléviseur, ne serrez pas trop le bas du panneau avant.
- Déposez les vis ou installez le crochet de fixation sur une surface stable et de niveau.

Español

Instalación del televisor en una pared

Puede instalar el televisor en una pared sujetándolo con el soporte de montaje mural (se vende por separado). Compruebe el número de modelo del televisor y asegúrese de utilizar solamente el soporte especificado para dicho modelo. Consulte los pasos de este folleto, junto con el manual de instrucciones suministrado con el soporte de montaje mural SU-WL500, para realizar la instalación correctamente.

Para proteger el producto y por motivos de seguridad, Sony le recomienda que utilice el modelo de Soporte de montaje mural diseñado para su televisor y que el montaje mural de su televisor sea realizado por un distribuidor de Sony o por un contratista con licencia.

Se requiere bastante experiencia para instalar este producto, especialmente para determinar la resistencia de la pared para soportar el peso del televisor. Asegúrese de contratar la instalación de este producto a la pared a un distribuidor o contratista autorizado de Sony y de prestar especial atención a la seguridad durante la instalación. Sony no se hace responsable de los daños materiales o personales provocados por una manipulación o instalación incorrecta.

Paso 1: Comprobar las piezas necesarias para la instalación

Abra el embalaje del soporte de montaje mural y compruebe que contiene todas las piezas necesarias, junto con el manual de instrucciones.

Paso 2: Decidir la ubicación de instalación

Decida dónde desea instalar el televisor. Consulte en el dorso de este folleto la tabla de dimensiones para la instalación del televisor.

Consulte el manual de instrucciones del soporte SU-WL500.

Paso 3: Instalación del soporte base en la pared

Consulte el manual de instrucciones del soporte SU-WL500.

Paso 4: Preparar la instalación del televisor

Desconecte todos los cables del televisor.

1 Fije el gancho de montaje a la parte posterior del televisor.

Consulte la tabla de diagrama de las ubicaciones de los ganchos y los tornillos del dorso de este folleto para determinar la posición de los tornillos y fije el gancho de montaje a la parte posterior del televisor.

❶ Fije el gancho de montaje a la parte posterior del televisor temporalmente mediante los cuatro tornillos suministrados (+PSW6 × 16).

❷ Asegúrese de que ambos tornillos estén bien apretados con la misma resistencia del par de fijación a la parte posterior del televisor.

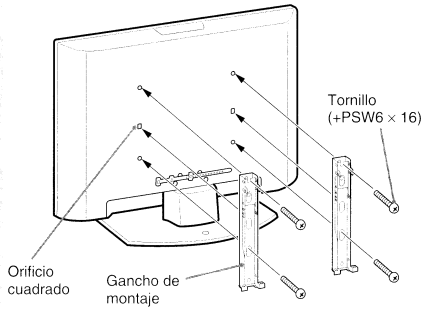

Alinee la lengüeta de la parte posterior del gancho de montaje con el orificio cuadrado de la parte posterior del televisor como se muestra en la siguiente ilustración.

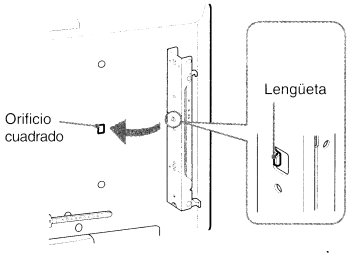

Notas

- Al fijar el gancho de montaje, asegúrese de utilizar solamente los tornillos suministrados (+PSW6 × 16).
- Si utiliza un destornillador eléctrico, ajuste el par de fijación aproximadamente a 2,0 N·m {20 kgf·cm}.

2 Ajuste el ángulo del gancho de montaje mediante la llave hexagonal suministrada con el soporte de montaje mural.

Cuando instale el televisor paralelo a la pared (0 grados), no será necesario realizar el ajuste del ángulo del gancho de montaje (procedimientos ❶ y ❷ detallados a continuación). Asegúrese de que cada una de las bases de los brazos Ⓧ queda fijada con seguridad.

❶ Extraiga los dos tornillos de la base del brazo Ⓧ del gancho de montaje. Seleccione los orificios correspondientes con el ángulo deseado (5, 10, 15 ó 20 grados).

❷ Ajuste los ángulos de los brazos superior Ⓨ e inferior Ⓩ para que se ajusten al orificio correspondiente y fije con seguridad cada brazo mediante los dos tornillos que ha extraído en el procedimiento anterior ❶.

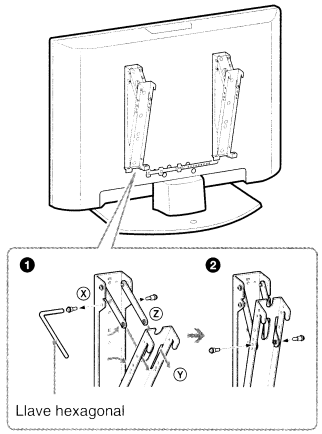

Notas

- Asegúrese de ajustar los brazos derecho e izquierdo en el mismo ángulo.
- Asegúrese de que las dos bases de los brazos hayan quedado fijadas con seguridad.

PRECAUCIÓN

Tenga cuidado de no pillarse los dedos al ajustar el ángulo del gancho de montaje.

3 Extraiga los tornillos de la parte posterior del televisor. A continuación, retire el televisor del soporte de sobremesa.

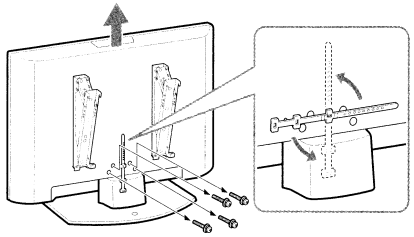

PRECAUCIÓN

Asegúrese de realizar esta tarea entre dos o más personas.

Paso 5: Instalar el televisor en la pared

Consulte el manual de instrucciones del soporte SU-WL500.

Notas

- Cuando vuelva a situar el televisor en el soporte, lleve a cabo los pasos anteriores al revés (inserte los postes del soporte y alinéelos con las líneas de la parte posterior del televisor).
- Cuando desplace el televisor, no apriete la parte inferior del panel frontal con demasiada fuerza.
- Extraiga los tornillos o instale el gancho de montaje en una superficie estable y nivelada.

English **TV installation dimensions table**
Français **Tableau des dimensions d'installation des téléviseurs**
Español **Tabla de dimensiones para la instalación del televisor**

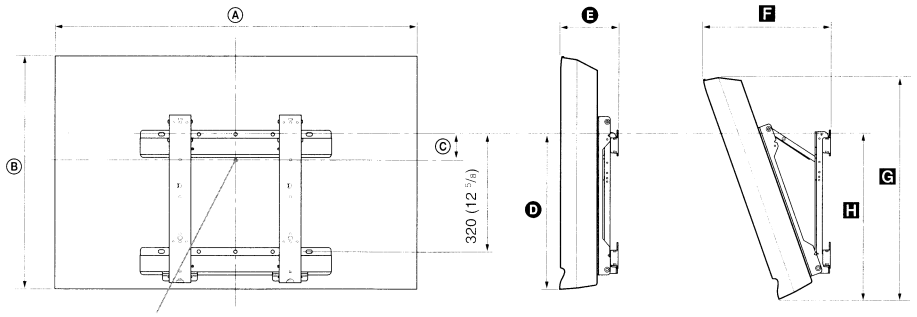

Screen center point/Point central de l'écran/Punto central de la pantalla

Unit: mm (inches)/Unité: mm (pouces)/Unidad: mm (pulgadas)

Model Name/ Nom du modèle/ Nombre del modele	Display dimensions/ Dimensions de l'écran/Dimensiones de la pantalla		Screen center dimensions/Dimension au centre de l'écran/ Dimensión del centro de la pantalla	Length for each mounting angle/ Longueur pour chaque angle de fixation/ Longitud de cada ángulo de montaje				
				Angle (0°)/Angle (0°)/ Ángulo (0°)		Angle (20°)/Angle (20°)/Ángulo (20°)		
	Ⓐ	Ⓑ	Ⓒ	Ⓓ	Ⓔ	Ⓕ	Ⓖ	Ⓗ
KDL-40S4100	997 (39 3/8)	652 (25 3/4)	122 (4 7/8)	475 (18 3/4)	171 (6 3/4)	352 (13 7/8)	620 (24 1/2)	516 (20 3/8)
KDL-46S4100	1130 (44 1/2)	746 (29 3/8)	84 (3 3/8)	489 (19 3/8)	176 (7)	384 (15 1/8)	709 (28)	531 (21)

Figures in the above table may differ slightly depending on the installation./
Les chiffres repris dans le tableau ci-dessus peuvent varier légèrement selon l'installation./
Las cifras de la tabla anterior pueden variar ligeramente en función de la instalación.

WARNING

The wall that the TV will be installed on should be capable of supporting a weight of at least four times that of the TV. Refer to your TV's instructions for its weight.

AVERTISSEMENT

Le mur sur lequel vous installez le téléviseur doit pouvoir supporter un poids équivalent à au moins quatre fois celui de l'appareil. Pour connaître son poids, reportez-vous au mode d'emploi du téléviseur.

ADVERTENCIA

La pared en la que se proponga instalar el televisor deberá ser capaz de soportar un peso al menos cuatro veces mayor que el del televisor. Consulte las instrucciones de su televisor para obtener información sobre el peso de éste.

English **Screw and Hook locations diagram/table**
Français **Schéma/tableau des emplacements des crochets et des vis**
Español **Tabla de diagrama de las ubicaciones de los ganchos y los tornillos**

Model Name/ Nom du modèle/ Nombre del modelo	Screw location/ Emplacement des vis/ Ubicación de los tornillos	Hook location/ Emplacement du crochet/ Ubicación de los ganchos
KDL-40S4100	d, g	b
KDL-46S4100	d, g	b

Screw location/Emplacement des vis/Ubicación de los tornillos

When installing the Mounting Hook on the TV./
En cas d'installation du crochet de fixation sur le téléviseur./
Al instalar el gancho de montaje en el televisor.

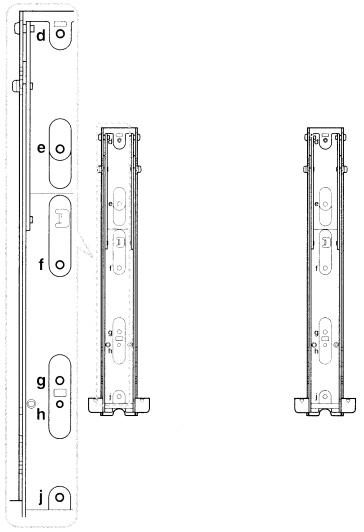

Hook location/Emplacement du crochet/Ubicación de los ganchos

When installing the TV onto the Base Bracket./
En cas d'installation du téléviseur sur le support de fixation de la base./
Al instalar el televisor en el soporte base.

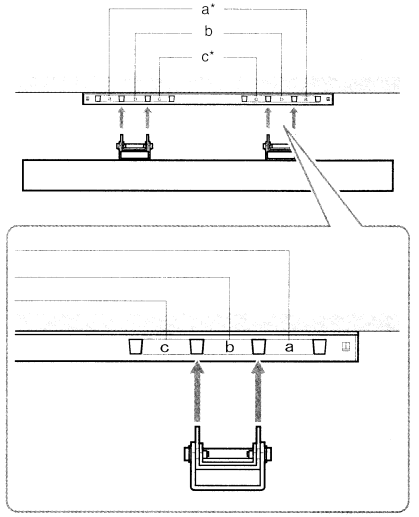

* Hook positions "a" and "c" cannot be used for the models in the table above./
* Les positions du crochet « a » et « c » ne peuvent pas être utilisées pour les modèles repris dans le tableau ci-dessus./
* Las posiciones del gancho "a" y "c" no se pueden utilizar para los modelos de la tabla anterior.

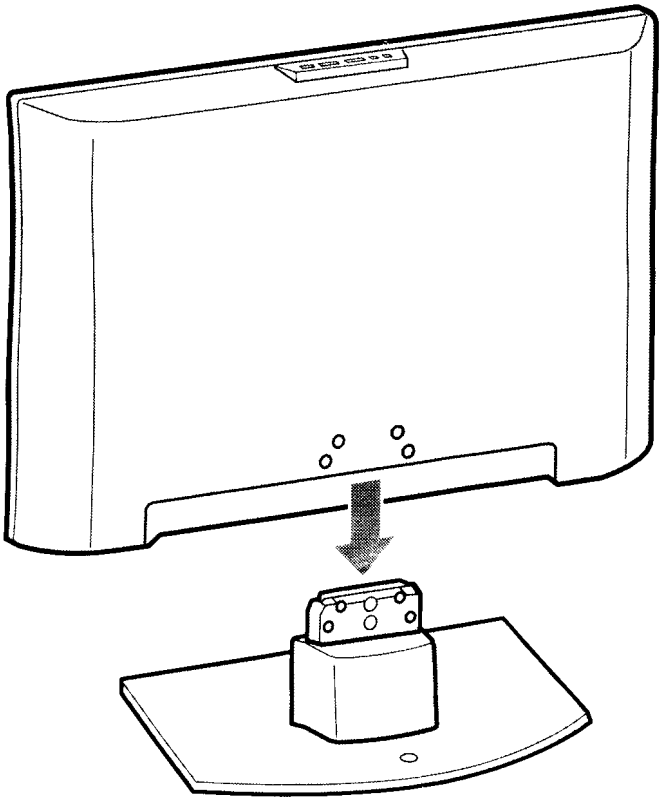

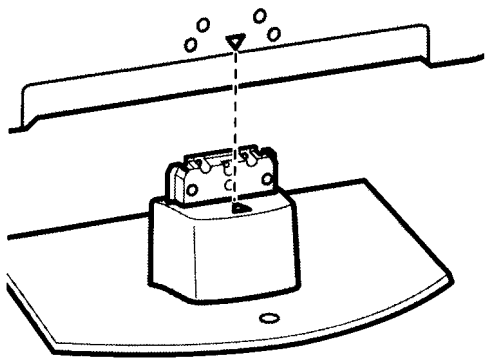

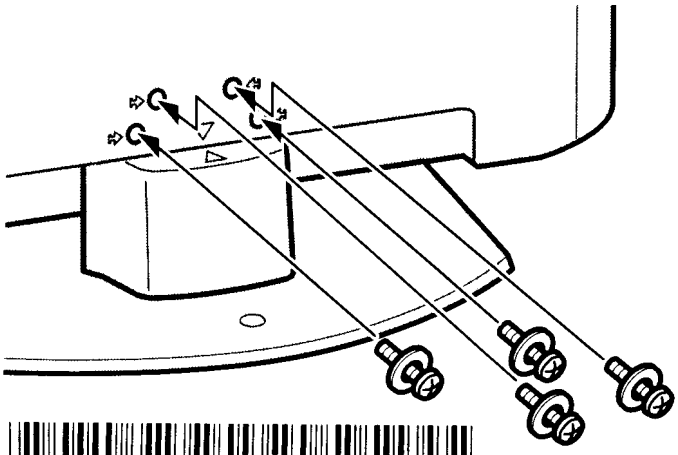

46.71H15.001

3-879-474-01

NOTICES AND LICENSES FOR SOFTWARE USED IN THIS TELEVISION

GPL/LGPL LICENSED SOFTWARE

The following GPL executables and LGPL libraries are used in this product and are subject to the GPL, LGPL License Agreements included as part of this documentation:

GPL Executable:

Linux Kernel
busybox
linetype with derivative work
portmap
bash
login
agetty
terminfo

e2fsprogs (Ext2 3 file system library)
libcom_err.so.2.0, libe2p.so.2.3, libext2fs.so.2.4

procps-2.0.7 (System and Process monitoring utilities)
libproc.so.2.0.7

libKfib.so (PSIP library)

LGPL Libraries:

glibc2.2.3 (Standard C Library) :
ld-2.2.3.so, libc-2.2.3.so, libcrypt-2.2.3.so, libdl-2.2.3.so, libm-2.2.3.so, libnsl-2.2.3.so, libpthread-0.9.so,

gpm-1.19.6 (Console Mouse Server)
libgpm.so.1.19.6

tcp_wrappers (tcp_wrappers library)
libwrap.so.0.7.6

libuuid-1.2 (Library to generate UUIDs)
libuuid.so.1.2

Source code for these executables and libraries can be obtained using the following link:
http://www.sony.com/linux

GNU GENERAL PUBLIC LICENSE
Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and an idea of what it does.
Copyright (C) *year name of author*

This program is free software; you can redistribute it and or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) *year name of author*
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome
to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program
`Gnomovision' (which makes passes at compilers) written
by James Hacker.

signature of Ty Coon, 1 April 1989
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

GNU LESSER GENERAL PUBLIC LICENSE
Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.
The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE
TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) The modified work must itself be a software library.

b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.

c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy. This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables

containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the library's name and an idea of what it does.
Copyright (C) *year name of author*

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library `Frob' (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990
Ty Coon, President of Vice

FREETYPE2 SOFTWARE

Portions of this software are copyright© 1996-2002. The Free Type Project (www.freetype.org). All rights reserved.

THE FREETYPE PROJECT IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL ANY OF THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY DAMAGES CAUSED BY THE USE OR THE INABILITY TO USE, THE FREETYPE PROJECT.

Printed in Mexico

NOTICE

4-106-120-**21**(1)

FOR UNITED STATES CUSTOMERS: NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC.
POUR LES CONSOMMATEURS DANS LES ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC.
ESTA NOTA ES APLICABLE A LOS CLIENTES DE LOS ESTADOS UNIDOS SOLAMENTE.

DIGITAL BROADCAST RECEPTION:

THE FCC TRANSITION TO DIGITAL OVER-THE-AIR BROADCASTING IS SCHEDULED FOR FEBRUARY 17, 2009. IT WILL NOT AFFECT THE FUNCTIONALITY OF THIS PRODUCT AS IT CONTAINS AN ATSC COMPLIANT DIGITAL TUNER.

Analog only television sets will require a digital-to-analog converter box to receive full power over-the-air programming after the transition, but should continue to work as before to receive low power, Class A, or translator television stations, and with cable and satellite TV services, gaming consoles, VCRs, DVD players and similar products. For more information, call Sony Support at 1-888-222-7669, or go to www.DTV.gov. For information about subsidized coupons for converter boxes, go to www.dtv2009.gov or call the NTIA at 1-888-DTV-2009.

© 2008 Sony Corporation

Printed in Mexico

4106120211

Product Registration

SONY

Thank you for purchasing this Sony product. Sony product registration is quick, easy and secure, and creates a record that can be used if your product is lost or stolen. It also allows us to send you periodic mailings about new products or contact you in the unlikely event that a safety notification is required. Please take the time to register the product at our web site:

From U.S.A.: http://productregistration.sony.com
From Canada: http://www.SonyStyle.ca/registration

If you have any operational questions regarding your new purchase, please see the instruction manuals and support documents that came with your Sony product.
Thank you.

© 2006 Sony Electronics Inc. Printed in Mexico

2-186-742-**61**(1)

Enregistrement de produit

SONY

Nous vous remercions d'avoir acheté ce produit Sony. L'enregistrement des produits Sony est rapide, facile et sécuritaire, et nous permet de créer un dossier qui peut être utilisé en cas de perte ou de vol de votre produit. Il nous permet également de vous envoyer des envois périodiques au sujet de nouveaux produits ou de vous contacter dans le cas peu probable où une notification de sécurité serait requise. Veuillez prendre le temps d'enregistrer le produit sur notre site Web :

Aux États-Unis : http://productregistration.sony.com
Au Canada : http://www.SonyStyle.ca/registration

Pour toute question sur le fonctionnement de votre nouvel achat, veuillez consulter les modes d'emploi et autres documents de soutien fournis avec votre produit Sony.

Merci !

© 2006 Sony Electronics Inc. Printed in Mexico

2186742610

2-186-742-**61**(1)

4-103-056-**02** (1)
4103056021

SONY®

LCD Television

LIMITED WARRANTY (US ONLY)

SONY ELECTRONICS INC. ("SONY") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, SONY will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

Term: For a period of one (1) year from the original date of purchase of the product (or a period of ninety (90) days for commercial use), SONY will, at its option, repair or replace with new or refurbished product or parts, any product or parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: In-home diagnostic warranty service is provided during the one (1) year limited warranty term (ninety (90) days for commercial use) for thirty (30) inch (measured diagonally) or larger screen size television products through a SONY-authorized service facility. Otherwise, to obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the SONY authorized service facility specified. A dated purchase receipt or bill of sale is required. For specific instructions on how to obtain warranty service for your product,

Visit SONY's Web Site:
www.sony.com/support

Or call the Sony Customer Information Service Center

1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of SONY.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to, product issues due to (i) acts of God, (ii) misuse, (iii) customer instruction, installation, set up adjustments or signal reception issues; (iv) limitations of technology, or (v) modification of or to any part of the SONY product, include the antenna. This Limited Warranty does not cover SONY products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

Printed in Mexico